

Basspods P181 TWS Earbuds - User Manual



Important: pTron Basspods P181 is set at 60% default volume, and the earbuds does not support volume adjustment. Please control the volume through the phone.



Smart Power On & Pairing

1. Open the charging case and take out both the earbuds together. Earbuds will power on automatically.
2. Wait for 2-3 seconds until L & R earbuds pair with each other.
3. Turn on the Bluetooth on your phone & search "pTron TWS" to connect with the device.

Smart Power Off

Touch TSA on both the earbuds for 5 seconds Or Keep both the earbuds into the charging case and close the charging case cap.

Note: TSA stands for Touch Sensitive Area.

Connectivity Bluetooth - Automatic

Just turn ON the Bluetooth earbuds. They will automatically connect to the last connected device (Instant wake & pair technology).

Note: The last connected device must be in 10 meters wireless range and Bluetooth function must be On.

Calling or Music through Mono & Dual Buds

Mono Bud Use - Just place the right or left earbud back into the charging case and close the charging case cap.

Dual Buds Use - Use left & right earbuds together.

Voice Assistant Activation

Long Touch TSA on either earbud for 2-3 seconds, you will hear a 'didi sound which indicates that the phone's voice assistant is awake.

Note: TSA stands for Touch Sensitive Area.

Call & Music Functions

Answer/Hangup a Phone Call - Touch TSA on either earbud once.

Reject a Phone Call - Double Touch TSA on either earbud once.

Music Play/Pause - Touch TSA on either earbud once.

Redial - Touch TSA 3 times on Right earbud.

Next Song - Double Touch TSA on Right earbud.

Previous Song - Double Touch TSA on Left earbud.

Note: TSA stands for Touch Sensitive Area.

Charging the Earbuds

1. Place both the earbuds into the charging case properly and close the cap. The earbuds will power off automatically when placed into the case.
2. The Red LED indicator of the earbuds & Blue LED indicator of the charging case is permanently ON during the charging of the earbuds.
3. When the earbuds are fully charged the Red LED indicator will turn off and the Blue LED on the charging case will also turn off.

Charging the Case

1. Connect the Type-C cable to the case and the USB end to a 5V power source.
2. The Orange LED indicator will blink when the charging case is getting charged. When fully charged the Orange light will turn steady.
3. Now, remove the charging case from charging. The charging case will have a Blue LED light turned on for a couple of seconds.

Caution: Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using DC5V-1A chargers & the USB cable included in the package.

Troubleshooting

Scenario 1 : One Earbud is Not Working

1. Place both the earbuds in the charging case and close the lid properly.
2. Take out both the earbuds together from the charging case.
3. Wait until L & R earbud pair with each other. After successful matching, only 1 earbud will flash Blue & Red light.
4. Turn ON the Bluetooth on your phone, search for "pTron TWS" & connect.

Scenario 2 : Earbuds Not Connecting/Scanning

1. Place both the earbuds in the charging case and close the lid properly.
2. Unpair the Bluetooth device with the connected device.
3. Take out both the earbuds together from the charging case.
4. Restart your Bluetooth device.
5. Now, search for "pTron TWS" on your device & pair it with the Bluetooth device & then connect it.

Scenario 3 : Earbuds Disconnecting During a Phone Call

1. Charge earbuds 100% before use.
2. Restart the earbuds and reconnect with your device.

Safety Precautions

1. Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
2. Please don't over-charge the product as it will decrease the service life of battery.
3. Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
4. This product or the Bluetooth function should not be used during charging.
5. Don't jam the ports such as charger port, LED port, etc.
6. It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.
7. Please don't open/temper the product or product's battery.
8. Please keep the product out of children's reach.
9. Dispose the product responsibly and adhere to your local authority guidelines.

Disclaimer

The colors and specifications shown or mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or on trade names of their respective owners.