


## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 300.0 mm x 390.0 mm x 324.0 mm
Bus Power Supply (USB)	5 V  500 mA

Design and specifications are subject to change without notice.

### Replacement of battery

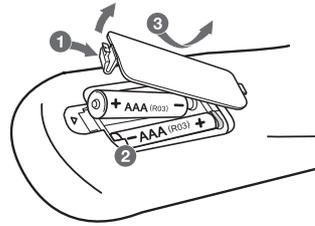

## SIMPLE MANUAL

# DVD Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

ON2D




MFL71714702  
2004\_Rev01

www.lg.com  
Copyright © 2020 LG Electronics Inc. All Rights Reserved.




## Top panel

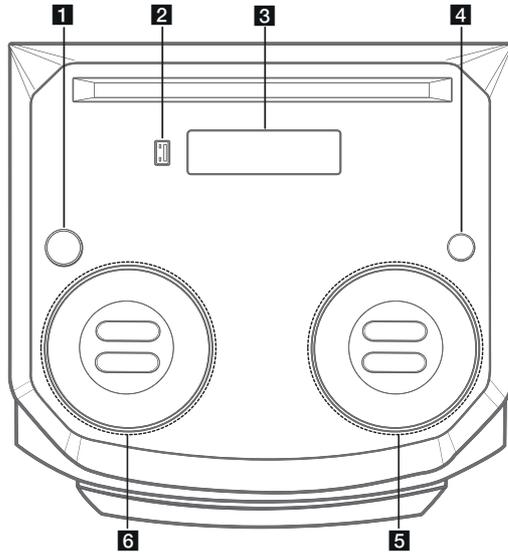


- 1** (Standby)  
Turns the power on or off.
- 2** USB Port  
You can play MP3 files by connecting the USB device.
- 3** Display window
- 4** **F** (Function)  
Selects the function and input source.
- 5** (Open/Close)  
Opens and closes the disc tray.  
**⏮/⏭** (Skip/Scan)  
- Skips backward or forward.  
- Scans for a section within a track/file/chapter.  
- Selects the radio stations.
- (Stop)  
Stops playback.
- VOL** (Volume) -/+  
Adjusts speaker volume.
- ⏮/⏭** (Play/Pause)  
Starts or pauses playback.
- 6** **MIC VOL** (Microphone volume) -/+  
Adjust microphone volume.
- MIC** (Microphone) **ECHO** -/+  
Adjusts microphone echo level.
- BASS** -/+  
Adjusts bass level.
- EQ**  
Chooses sound impressions.

## Front panel / Rear panel

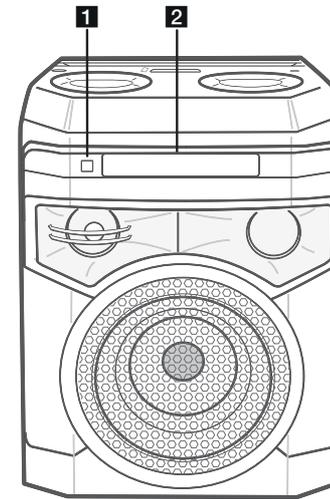

- 1** Remote sensor
- 2** Disc tray

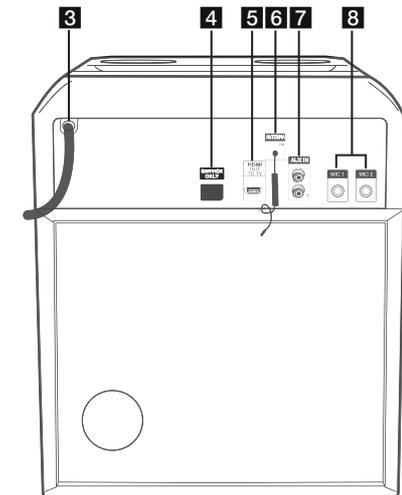


- 3** Power cord
- 4** **SERVICE ONLY:** S/W download connector.
- 5** **HDMI OUT TO TV:** Connect to TV.
- 6** **ANTENNA FM**
- 7** **AUX IN (L/R):** Connect an auxiliary device.
- 8** **MIC (Microphone) 1/2:** Connect a microphone.

## 1 TV Connection

**HDMI Connection :**  
Connect with the Unit and TV using HDMI.

- 1** Connect the Unit to the TV using HDMI cable.
- 2** Set the input selector to HDMI on the TV.
- 3** Follow the instructions on the TV screen using remote control.

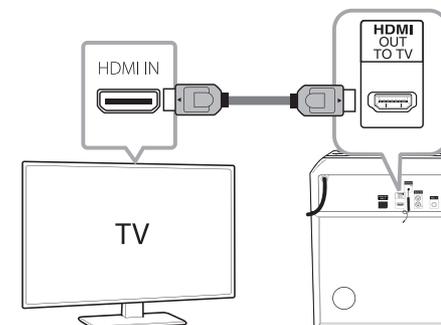

## 2 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.



**!** Home menu only appears on DVD.CD function.