



Dynamo

Build Your Party

Model No.: iG-1023

Features

Bluetooth wireless connectivity
Supports USB/TF card
AUX function
Karaoke function
Rechargeable Lithium battery

Specifications


Output power	: 10W
Driver unit size	: 4Inch
Impedance	: 3 Ohm
S/N ratio	: $\geq 85\text{dB}$
Separation	: $\geq 80\text{dB}$
Distortion	: $\leq 10\%$
Frequency response	: 10Hz-20KHz
Bluetooth version	: V5.0
Bluetooth range	: 10 meters
Bluetooth pairing name	: iGear-Dynamo
Bluetooth profiles supported	: A2DP
USB & TF max. memory supported	: 32 GB
Battery capacity	: Built-in 1200mAh
Battery type	: Li-ion
Charging indicator	: Yes
Input power	: DC 5V

Accessory

Charging cable	: 1piece	User manual	: 1piece
Aux cable	: 1piece	Remote	: 1piece

Connect to Bluetooth device

Turn on the speaker unit and the Bluetooth switch on your mobile/other device and search for the speaker model name "iGear-Dynamo". Pair the device. Once the device is paired, Bluetooth will automatically connect every time the unit is turned on subsequently.

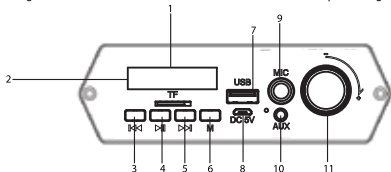

- | | |
|---------------------------|----------------------|
| 1. Digital Display | 7. USB slot |
| 2. TF-card slot | 8. 5V charging port |
| 3. Previous / Back button | 9. Mic jack |
| 4. Play / Pause button | 10. AUX-IN jack |
| 5. Forward / Next button | 11. Power on/off and |
| 6. Mode button | Master volume knob |

Bluetooth

Turn on the speaker, it come into the Bluetooth mode directly. After pairing, the device can play music. Short time Press ►|| to Pay/Pause, Short press ◀◀ and ▶▶ to surf through Prev. and Next. Long press ◀◀ and ▶▶ to turn down and turn up the volume.

AUX-IN

AUX-IN using the audio cable into AUX jack, and press 'M' to switch to AUX-IN mode. Long press ⏮ and ⏭ to turn down and turn up the volume. Under AUX-IN, it can't shift to Prev. and Next by Bluetooth speaker, but can be controlled by connected devices.

USB/TF card

Insert the U flash memory or TF card into the USB/TF slot. It will read the MP3 format music automatically. Press ▶|| to Play/Pause. Short press ⏮ and ⏭ to surf Prev. and Next. Long press ⏮ and ⏭ to turn down and turn up the volume.

FM Radio

Long press ▶|| to search FM channels automatically. This operation will scan all FM stations and pre-record them to memory. The scan procedure will take several minutes to complete and should not be interrupted. Once complete, you can short press ⏮ or ⏭ to move forward or backward. Long press ⏮ or ⏭ to turn down or turn up Volume.

Note: AUX Port connection can receive the FM radio clearly as, it has the same function as the antenna.

Charging

Please use the original charging cable to charge Red LED display when on charging.

iGear Tech Pvt. Ltd., 204, Sai Corporate Park, Laxmi Nagar, Off Link Road, Goregaon West, Mumbai - 400104.

In case of consumer complaints: Toll free number - 1800 22 8495,
Email: sales@igear.asia (Between 10am to 5pm, Mon- Fri)