



**COMBINATION OVEN WITH MICROWAVE
OPERATION MANUAL**

MODEL: EPBI COMBO OVEN 390

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

en Table of contents

Important safety information	2	Setting the time-setting options	12
Causes of damage.....	6	Setting the timer.....	12
Installation	6	Setting the cooking time.....	13
Your new appliance	8	Setting the clock.....	13
Control panel.....	8	Childproof lock	13
Touch keys and display.....	8	Switching on the childproof lock.....	13
Function selector.....	8	Switching off the childproof lock.....	13
Parameter selector.....	8	Childproof lock with automatic programmes.....	13
Cooling fan.....	8	Quick Start	13
Accessories.....	9	Care and cleaning	14
Before using the appliance for the first time	9	Cleaning agents.....	14
Setting the clock.....	9	Technical data.....	14
Heating up the oven.....	9	Malfunction table	15
Cleaning the accessories.....	9	Acrylamide in foodstuffs	15
Setting the oven	9	Energy and environment tips	16
Setting the type of heating and temperature.....	9	Saving energy.....	16
Rapid preheating.....	10	Environmentally-friendly disposal.....	16
The microwave	10	Expert Cooking Guide	16
Notes regarding ovenware.....	10	Defrosting, heating up and cooking with the microwave.....	16
Microwave power settings.....	10	Microwave tips.....	19
Setting the microwave.....	11	Cakes and pastries.....	19
MicroCombi operation	11	Baking tips.....	20
Setting Microwave Combi operation.....	11	Roasting and grilling.....	21
Automatic programmes	11	Tips for roasting and grilling.....	23
Setting a programme.....	11	Bakes, gratins, toast with toppings.....	23
Defrosting programmes.....	12	Convenience products, frozen.....	24

Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual for future use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges,

damp cloth and similar may lead to risk of injury, ignition or fire.

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under warranty.

This appliance is intended for domestic use only. The appliance must only be used for the preparation of food and drink. The appliance must be supervised during operation. Only use this appliance indoors.