



An ISO 9001- 2008 Certified Company

# EPBI TRIM 1062 DMF BK Built-In Electric Oven User Manual



## CONTENT

ACKNOWLEDGMENT.....	3
DECLARATION OF COMPLIANCE.....	4
FUNCTIONS OF OVEN.....	5
INSTALLATION INSTRUCTIONS.....	7
OPERATION INSTRUCTIONS.....	8
CLEANING AND MAINTENANCE.....	11
PRODUCT DESCRIPTION.....	11
CORRECT DISPOSAL OF THIS PRODUCT.....	12

## ACKNOWLEDGMENT

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using the product are familiar with these instructions as well.

## WARNING

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. This is completely normal, if it does occur, you merely have wait for the smell to clear before putting food into the oven.
3. The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
4. Children less than 8 years of age shall be kept away unless continuously supervised.
5. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass of the oven. This can scratch the surface and may result in permanent damage to the glass.
6. During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
7. Do not allow children to go near the oven when it is operating, especially when the grill is on.
8. Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
9. The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
10. During pyrolytic cleaning, accessible parts may become hotter than normal. Young children should be kept away.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not use the oven unless you are wearing something on your feet.
13. Do not touch the oven with wet or damp hands or feet.
14. For oven: Oven door should not be opened often during the cooking period.

15. The appliance must be installed by an authorized technician and put into use.
16. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
17. When the door or drawer of oven is open do not leave anything on it, you may unbalance your appliance or break the door.
18. Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
19. If you will not use the appliance for a long time, it is advised to plug it off.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
21. Before cleaning, remove all the accessories and excess spillage in the oven.
22. A steam cleaner is not to be used.

### FITTING THE OVEN INTO THE KITCHEN UNIT

Fit the oven into the space provided in the kitchen unit; it may be fitted underneath a work top or into an upright cupboard. Fix the oven in position by screwing into place, using the two fixing holes in the frame. To locate the fixing holes, open the oven door and look inside. To allow adequate ventilation, the measurements and distances adhered to when fixing the oven.

### IMPORTANT





 
 
 


If the oven is to work properly, the kitchen housing must be suitable. The panels of the kitchen unit that are next to the oven must be made of a heat resistant material. Ensure that the glues of units that are made of veneered wood can withstand temperatures of at least 120°C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit, once the oven has been lodged inside the units, electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The hob must have a rear gap of at least 45 mm.

### DECLARATION OF COMPLIANCE


When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.



## FUNCTIONS OF OVEN


Symbol	Function description
	Oven Lamp: which enables the user to observe the progress of cooking without opening the door.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food, (without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc.
	Bottom heat: A concealed element in the bottom of the oven provides a more concentrative heat to the base of food without browning. This is ideal for slow cooking dishes such as casseroles, stews, pastries and pizzas where a crispy base is desired. The temperature can be set within the range of 60-120°C. The default temperature is 60°C.
	Conventional cooking: The top and bottom work together to provide convectional cooking. The temperature can be set within the range of 50-250°C. The default temperature is 220°C. This is optional function that can be work with rotisserie motor.
	Convention with fan: Combination of the fan and both heating element provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature. The temperature can be set within the range of 50-250°C. The default temperature is 220°C.
	Radiant grilling: The inner grill element switches on and off to maintain temperature. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. This is optional function that can be work with rotisserie motor.
	Double grill: The radiant heating element and the top heating element are working. The temperature can be set within the range of 180-240°C. The default temperature is 210°C.
	Double grill with fan: The radiant heating element and top heating element are working with fan. The temperature can be set within the range of 180-240°C. The default temperature is 210°C.
	Convection: An element around the convection fan provides an additional source of heat for convection style cooking. In convection mode the fan automatically comes on to improve air circulation within the oven and creates an even heat for cooking. The temperature can be set within the range of 50-240°C. The default temperature is 180°C.

## PRODUCT DESCRIPTION

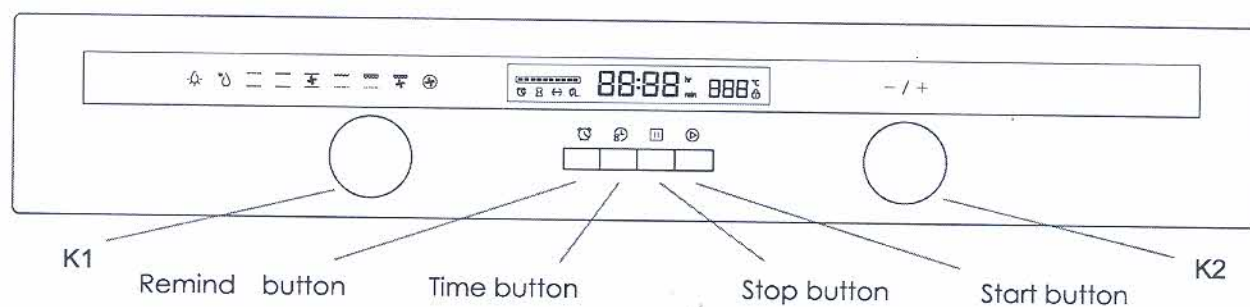

## ACCESSORIES


**Telescopic runner:** Some of models might with telescopic runners to facilitate the use of oven. These telescopic runners could be disassembled for cleaning by unscrew the screw use to fix it.

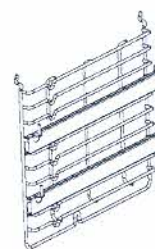

**Wire shelves :** For grill dishes, cake pan with items for roasting and grilling.




**Universal pan:** For cooking large quantities of food such as moist cakes, pastries, frozen food etc, or for collecting fat/ spillage and meat juices.

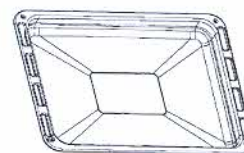


## SHELF PLACEMENT WARNING :

To ensure the oven shelves operate safely, correct placement of the shelves between the side rails is imperative. This will ensure that during careful removal of the shelf or tray hot food items should not slide out.

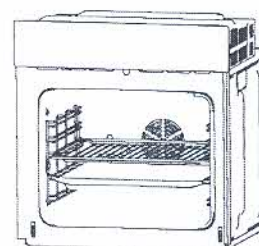

## USE OF ROTISSERIE ACCESSORIES

The rotisserie works in combination with the grill element to cook cuts of meat or poultry, at the same time browning to perfection.

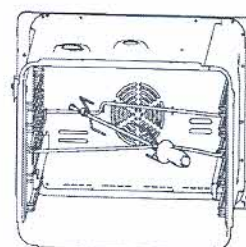


## BULB REPLACEMENT

The bulb in the light is a special bulb, and has high temperature resistance (240V~25W).

For replacement, proceed as follows:

- 1>.Disconnect power from the mains outlet or switch off the circuit breaker of the unit's mains outlet.
- 2>.Unscrew the glass lamp cover by turning it counter-clockwise (note, it may be stiff) and replace the bulb with a new one of the same type.
- 3>.Screw the glass lamp cover back in place.


NOTE:Only use 25-40W/220V-240V , T300 °C halogen lamps.

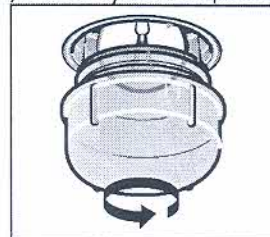


## INSTALLATION INSTRUCTIONS

### SECURING THE OVEN TO THE CABINET


1. Fit oven into the cabinet recess.
2. Open the oven door.
3. Secure the oven to the kitchen cabinet with two distance holders "A" which fit the holes in the oven frame and fit the two wood screws "B".

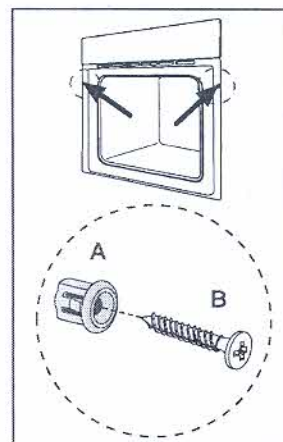

### CONNECTION OF THE OVEN

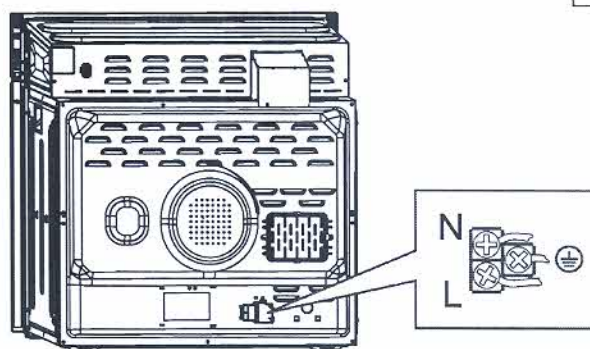

## INSTALLATION

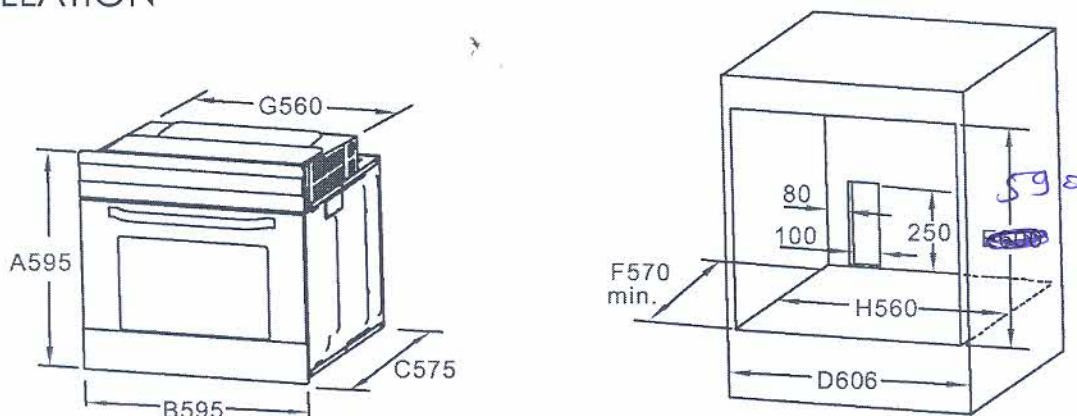


NOTE: The number of accessories included depends on the particular appliance purchased.


# OPERATION INSTRUCTIONS

## 1. Clock Setting


After connecting the unit to the power, the symbols 0:00 will be visible on the display.

1> Press "  ", the hour figures will flash.

2> Rotate " K2 " to adjust the hour figures, the input time should be within 0--23.

3> Press "  ", the minutes will flash.

4> Rotate " K2 " to adjust the minutes setting, the input time should be within 0-59.


5> Press "  " to finish the clock settings. ":" will flash.

Note: The clock is 24 hours. If the clock is not set, it would not function when power is on, "0:00" will display.

## 2. Function Setting

1> Rotate " K1 " to choose the cooking function you require. The related indicator will be illuminated.

2> Rotate " K2 " to adjust the temperature.

3> Press "  " to confirm the start of cooking. The corresponding icon for temperature " °C " will be on.

4> If step 2 is ignored, press "  " to confirm the start of cooking. the default temperature will display on the LED.

NOTE:


1> The step quantities for the adjustment time of the coding switch are as follows:

0--0:30min: step 1 minute



0:30--9:00hour: step 5 minutes

2> The step quantities for the adjustment of temperature is 5 °C, and the grill function is 30 °C.

3> Rotate " K1 " to adjust the cooking time when cooking begins. Then press "  " to start cooking.

 
If "  " not pressed within 3 seconds, the oven will revert back to the previous time to continue cooking.

4> Rotate " K2 " to adjust the temperature when cooking begins. The related indicator will be illuminated.

Then press "  " to start cooking. If "  " not pressed in 3 seconds, the oven will revert back to the previous temperature to continue cooking.

## 3. Lamp Setting

1> Rotate " K1 " to select the relevant function, then the corresponding icon will be on.

2> Press "  " button to start cooking. Lamp icon "  " \* " 0:00 " will light.



## 4. Inquiring function

During cooking process, you can use inquiring function, after 3 seconds return to the current working state.

1> During cooking mode, press "  " button to check the current time.

2> If the clock was set, press "  " button to ask for current time.

## 5. Child lock function

To Lock : press "  " and "  " simultaneously for 3 seconds, there will be a long "beeping" sound indicating the children-lock is on and the "  " will be illuminated.

Lock quitting : press "  " and "  " simultaneously for 3 seconds, there will be a long "beeping" sound indicating the child-lock is released.




Note: During working mode, if you want to stop cooking, press stop button quickly. Do not need to long pressing on stop button, it is invalid.

## 6. Reminder Function:


This function will help to remind you to start cooking in a certain time from 0:01 to 9:59.

Only when oven in standby mode and clock setting, the reminder can be set.





Follow below to set the reminder:

- 1> Press reminder setting button "  ";
- 2> Rotate " K2 " to set the hour time of reminder.
- 3> Press reminder setting button "  " again;
- 4> Rotate "K2 " to set minute time of reminder.
- 5> Press "  " to confirm cooking.


Note: After the set time, the oven buzzer will sound for 10 times.

You can cancel the reminder during setting by pressing "  " button.



## 7. Start/Pause/Cancel Function

- 1> If the cooking time has been set, press "  " to start cooking. If the cooking is paused, press "  " to resume cooking.
- 2> During cooking process, press "  " once to pause the cooking. Press "  " twice to cancel the cooking.

## 8. Energy-Saving Function


- 1> During in waiting state and reminding state , press "  " for three seconds, the LED display will go off and set to energy-saving mode.
- 2> If no operation in 10 minutes under waiting state, the LED display will go off and go into energy-saving mode.
- 3> Under the energy-saving mode, press any key or rotate any encoder can quit the energy-saving mode.

## 9. Reservation function

- 1> To use reservation function, clock must be set in advance. Then, in the way of setting the clock, reserved time that oven starts to cook must be set (a> Press reservation setting button "  "; b> Rotate " K2 " to set the hour time of reservation. Time should be within 0--23. c> Press reservation setting button "  " again; d> Rotate " K2 " to set the minute time of reservation. Time should be within 0--59.),

but don't press clock this time. Next, turn knob " K1 " to choose function.

- 2> Press "  " button to set cooking time and temperature. Then turn knob " K1 " to adjust time, and " K2 " to adjust temperature.

- 3> Press the "  " button to finish cooking setting, and the clock will be on the screen with reservation

sign "  " always lighting. But no other function signals are presented. Reservation time can be checked

by pressing "  ", 3 seconds later the screen will show clock again.

- 4> At the time of reservation, cooking will start automatically after a buzzing sound. The reservation symbol

"  " will put out, and other indicating signs will work normally.

Note:

1. Lamp, defrost, probe can't be reserved.
2. During the status of reservation, press cancel button once, time and temperature of reservation menu will be shown with menu icon lighting constantly. Press again, screen returns to clock, or press start button to return to reservation status.
3. Reminder function is invalid during reservation status and vice versa.

## 10. Note

- 1>The oven lamp will be on for all functions.(except pyrolytic function)
- 2> Once the cooking programme has been set and the "▶" button is not pressed within 5 minutes, the current time will be displayed or turn back to waiting state. The setting program will be invalid.
- 3>The buzzer sounds when effectively pressed, if not effectively pressed there will be no response.
- 4> The buzzer will sound five times to remind you when cooking has finished.

## CLEANING AND MAINTENANCE

For the sake of a good appearance and reliability keep the unit clean. The modern design of the unit facilitates maintenance to a minimum. The parts of the unit which come into contact with food have to be cleaned regularly.

- Before any maintenance and cleaning disconnect the power.
- Set all controls in the OFF position.
- Wait until the inside of the unit is not hot but only slightly warm. Cleaning is easier than when warm.
- Clean the surface of the unit with a damp cloth, soft brush or fine sponge and then wipe dry. In case of heavy soiling, use hot water with non-abrasive cleaning product.
- For cleaning the glass of the oven door do not use abrasive cleaners or sharp metal scrapers. These can scratch the surface or lead to the glass being damaged.
- Never leave acidic substances (lemon juice, vinegar) on stainless steel parts.
- Do not use a high pressure cleaner for cleaning the unit. The baking pans may be washed in mild detergent.

## PRODUCT DESCRIPTION

Supplier's name	ELICA
Supplier's model identifier	EPBI TRIM 1062 DMF BK
Energy efficiency index(EEIcavity) per cavity	106.0
Energy class	A
Energy consumption per cycle in forced air mode	0.89
Energy consumption per cycle in conventional mode	0.99
Number of cavity	1
The heat source per cavity	Electricity
Volume of each cavity	70L
Voltage	220-240V~ 50/60Hz
Max power	3000W

We decline liability for any damage or accident derived from any use of this product which is not in conformity with the instructions contained in this booklet.

## CORRECT DISPOSAL OF THIS PRODUCT



This appliance is marked according to the European directive 2011/65/UC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.