

DVD Home Theatre System


Operating Instructions

Bluetooth [®]	
ноті	

DAV-DZ350/DAV-DZ650/DAV-DZ950

©2013 Sony Corporation Printed in China

GB

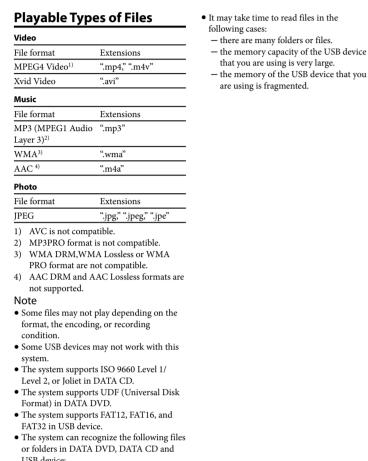


— up to 648 files

Connecting the Speakers

Cautior Do not use any speakers other than those supplied with this system.

 Insert the speaker cords to match the color of the SPEAKERS terminals of the unit.



This product is classified Class 1 Laser product by IEC60825-1:2007. This label is

located on rear surface of the product. Trademarks This system incorporates with Dolby* Digital and Dolby Pro Logic adaptive matrix surround decoders.

easily accessible AC outlet. Should you notice Manufactured under license from Dolby an abnormality in the unit, disconnect the Laboratories main plug from the AC outlet immediately. Dolby, Pro Logic, and the double-D Do not install the appliance in a confined space, such as a bookcase or built-in cabinet. symbol are trademarks of Dolby Laboratories. Do not expose batteries or appliances with This system incorporates High-Definition battery-installed to excessive heat, such as Multimedia Interface (HDMI[™]) technology.

The terms HDMI and HDMI High-The unit is not disconnected from the mains Definition Multimedia Interface, and the as long as it is connected to the AC outlet, HDMI Logo are trademarks or registered even if the unit itself has been turned off. trademarks of HDMI Licensing LLC in the United States and other countries. The use of optical instruments with this

product will increase eye hazard. is a trademark of DVD Format/Logo Licensing Corporation.

For customers in India Disposal of Old Electrical &

sunshine and fire.

CAUTION

Complies with

IMDA Standard DB00353

Unpacking

• Main unit (1)

Speaker packages • DAV-DZ350

UU

• DAV-DZ650

• DAV-DZ950

Checking the supplied items

WARNING

liquids, such as vases, on the appliance.

To reduce the risk of fire, do not cover the

ventilation opening of the appliance with

Do not expose the appliance to naked flame

As the main plug is used to disconnect the

unit from the mains, connect the unit to an

newspapers, tablecloths, curtains, etc.

sources (for example, lighted candles).

"PlayStation" and "PS3" are registered **Electronic Equipment** trademarks of Sony Computer Entertainment (Applicable in the European Union and other Europeau countries with separate collection systems) Corporation

Remote commander

• Speaker assembly parts for the tall speakers

(remote) (1)

For customers in Singapore Thomson

"BRAVIA" is a trademark of Sony MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and

Windows Media is either a registered trademark or trademark of Microsoft

respective owners **About these Operating** Instructions "DVD" may be used as a general term for a DVD VIDEO, DVD+RW/DVD+R, and Corporation in the United States and/or other DVD-RW/DVD-R. countries. This product is protected by certain

technology outside of this product is When the system is in pause, stop, open, or prohibited without a license from Microsoft no disc mode, the system will enter standby or an authorized Microsoft subsidiary. mode automatically after 20 minutes.

automatically.

intellectual property rights of Microsoft

IS LICENSED UNDER THE MPEG-4

FOR THE PERSONAL AND

NONCOMMERCIAL USE OF A

VISUAL PATENT PORTFOLIO LICENSE

CONSUMER FOR DECODING VIDEO IN

VISUAL STANDARD ("MPEG-4 VIDEO")

THAT WAS ENCODED BY A CONSUMER

NONCOMMERCIAL ACTIVITY AND/OR

PROVIDER LICENSED BY MPEG LA TO

NO LICENSE IS GRANTED OR SHALL BE

COMPLIANCE WITH THE MPEG-4

ENGAGED IN A PERSONAL AND

WAS OBTAINED FROM A VIDEO

IMPLIED FOR ANY OTHER USE.

INCLUDING THAT RELATING TO

PROMOTIONAL, INTERNAL AND

LLC. SEE http://www.mpegla.com/

Corporation is under license. Other

respective owners

COMMERCIAL USES AND LICENSING

MAY BE OBTAINED FROM MPEG LA,

The *Bluetooth** word mark and logos are

registered trademarks owned by Bluetooth

Preparing the remote control

the \oplus and \ominus ends on the batteries to the

markings inside the compa

Insert two R6 (size AA) batteries by matching

SIG, Inc. and any use of such marks by Sony

ADDITIONAL INFORMATION

PROVIDE MPEG-4 VIDEO.

Corporation. Use or distribution of such

ABOUT MPEG-4 VISUAL: THIS PRODUCT Bluetooth wireless

The system enters standby mode

technology Bluetooth wireless technology is a short-range wireless technology linking digital devices such as personal computers and digital cameras. Using the Bluetooth wireless technology, you can operate the units involved within a range of about 10 meters. The Bluetooth wireless technology is commonly used between two devices, but a single device can be connected to multiple devices. You do not need wires to get connected as you do with a USB connection, and you do not need to place the devices face to face as you do with wireless infrared technology. You can use the technology with one Bluetooth device in your bag or pocket. Bluetooth wireless technology is a global standard supported by thousands of companies. These companies produce products that meet the global standard.

Supported Bluetooth version and profiles

Profile refers to a standard set of capabilities trademarks and trade names are those of their for various Bluetooth product capabilities. This system supports the following Bluetooth All other trademarks are trademarks of their version and profiles. Supported Bluetooth version *Bluetooth* Standard version 2.1 + EDR

(Enhanced Data Rate) Supported Bluetooth profiles A2DP (Advanced Audio Distribution Profile) AVRCP (Audio Video Remote Control Profile)

only)

Note

(**D**).

• For you to use the Bluetooth function, the Bluetooth device to be connected must support the same profile as this system. Even if the device supports the same profile, the functions may differ because of the specifications of the Bluetooth device. The audio playback on this system may be delayed from that on the Bluetooth device

Note

Effective communication range

because of the characteristics of the

Bluetooth wireless technology.

Bluetooth devices should be used within approximately 10 meters (unobstructed distance) of each other. The effective nication range may become shorter under the following conditions. When a person, metal object, wall or other obstruction is between the devices with a Bluetooth connection Locations where a wireless LAN is installed Around microwave ovens that are in use

• Locations where other electromagnetic waves occur Effects of other devices

Bluetooth devices and wireless LAN (IEEE 802.11b/g) use the same frequency band (2.4 GHz). When using your Bluetooth device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, trv the following remedies: • Try connecting this system and *Bluetooth* mobile phone or *Bluetooth* device when you are at least 10 meters away from the wireless different control methods, display or LAN equipmen Turn off the power to the wireless LAN equipment when using your Bluetooth device within 10 meters.

Effects on other devices

Note

The radio waves broadcast by this system may D interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system, Bluetooth mobile phone and Bluetooth device in the following locations: CI • In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gasses may be present Near automatic doors or fire alarms • This system supports security functions that comply with the Bluetooth specification as a means of ensuring security during communication using Bluetooth technology. However, this security may be insufficient depending on the setting contents and other factors, so always be careful when

performing communication using Bluetooth technology. • Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using Bluetooth technology.

 Bluetooth communication is not necessarily guaranteed with all Bluetooth devices that have the same profile as this system. Bluetooth devices connected with this system must comply with the Bluetooth specification prescribed by the Bluetooth

SIG, Inc., and must be certified to comply. However, even when a device complies with the Bluetooth specification, there may be cases where the characteristics or specifications of the Bluetooth device make it impossible to connect, or may result in

operation Noise may occur or the audio may cut off depending on the Bluetooth device connected with this system, the communications environment, or surrounding conditions.

layable Discs		Note on playback operations of a DVD Some playback operations of a DVD may be
VVD	DVD-VIDEO DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW	intentionally restricted by software producers. Since this system plays a DVD according to the disc contents the software producers designed, some playback features may not be available. Note about double-layer DVDs The playback picture and sound may be momentarily interrupted when the layers switch. Region code (DVD VIDEO only)
D	CD-DA (Music CD) CD-ROM CD-R/CD-RW VIDEO CD Super VCD	
		····j·····

Your system has a region code printed on the

A CD or DVD will not play if it has not been correctly finalized. For more information refer to the operating instructions supplied with the recording device

rear of the unit and will only play a DVD VIDEO (playback only) <u>labe</u>led with an identical region code or Discs that cannot be played Note about Multi Session CD Blu-ray Discs You can play only the first session of a

 HD DVDs multisession disc. • DVD-RAMs DVD Audio discs PHOTO CDs • Super Audio CDs Data track of CD-Extras

 
 Audio material side on DualDiscs • DVD-R/DVD-RW/DVD+R/DVD+RW in VR (Video Recording) mode

• CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing content flagged as "Copy once."

Notes on discs

This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this product.

4 Remove any slack of the speaker cord in the speaker by gently pulling it from below the base (🕒)



1 Place the base (3) on the lower part of the speaker (3), and secure it with three screws



this case, the below assembly is not required

Thread the speaker cord of the upper part of the speaker (1) into the top of the lower part of the speaker (), then pull the speaker cord from below the base ().


Assembling the tall-type speakers (DAV-DZ650/DAV-DZ950

• The upper part of the front speakers can be directly wall mounted (the lower parts are not used). In

Spread a cloth on the floor to avoid damaging the floor when you assemble the speakers.



3 Place the upper part of the speaker (③) onto the lower part of the speaker (④) while gently pulling the speaker cord from below the base. Then secure the upper and lowe parts of the speaker with a screw (\mathbf{O}) .

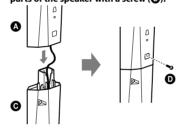

When connecting a TV and set-top box/PlayStation®3

*1 Supplied only in certain areas. This is the When Installing the basic connection via video cord (yellow).

Speakers on a Wall Caution

10

² Supplied only in certain areas. Picture quality will be improved compared to a

video cord.

Contact a screw shop or installer for

hang the speaker on the wall. Depth of fastened screw ſ

2 Fasten the screws to the wall, then

Connecting your TV

Depending on the jacks on your TV or set-top box, select the video and audio connection method.

When connecting to a TV only T or AUDIO OUT jacks:

 
Operating Instructions

Speaker assembly parts for the tall speakers

For DAV-DZ950 63

For DAV-DZ650


1





 
* High Speed HDMI cable and video cord are included only in certain areas







G

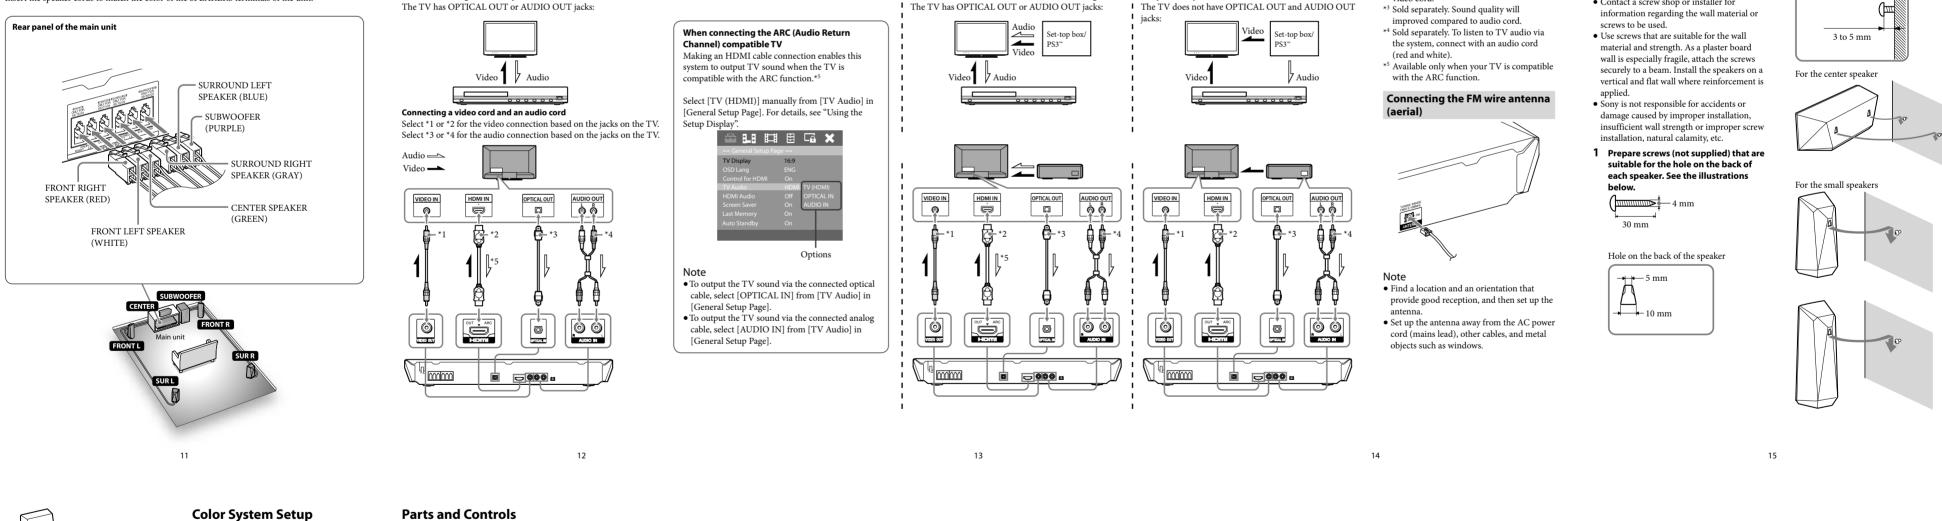

Color System Setup

lead).

and TV.

1 Connect the AC power cord (mains 2 Turn on the power of the main unit 3 Press FUNCTION repeatedly or DVD/ CD to switch the function to DVD/CD. Playback starts automatically if a disc

with an auto playback function is loaded Press I twice to stop playback. 4 Switch the input selector on your TV to display "Home Theatre System."

I/Ů

5 Press SETUP in stop mode.

The Setup Menu appears. 6 Press ←/→ repeatedly to select

[Preference Page], then press 🕀. 7 Press ↑/↓ repeatedly to select [TV


Type], then press 🕂. 8 Press ↑/↓ repeatedly to select [PAL] or [NTSC] from the displayed list, then

press 🕀. 9 Press SETUP to turn off the Setup

Menu.

Note

• The display on the TV screen may be interrupted momentarily after changing the color system as described above

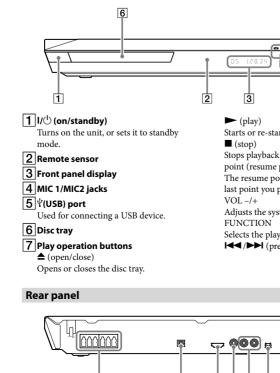

Front panel

1 SPEAKERS terminals 2 OPTICAL IN jack 3 HDMI OUT jack

3 4 5 6

17

4 VIDEO OUT jack

5 AUDIO IN jacks

6 FM ANTENNA jack

Remote control 7 Starts or re-starts playback (resume play). Stops playback and remembers the stop point (resume point). The resume point for a title/track is the last point you played. Adjusts the system's volume Selects the playback source. I (previous/next)

DISPLAY SETUP PRESET- PRESET+ SHIFT SONY AV SYSTEM SHIFT Press and hold this button to use buttons with purple text labels. TV INPUT* Switches the TV's input source between the TV signal and other input sources. SLEEP Sets the sleep timer.

INPUT ONE-TOUCH TVI/O

4 5 6 FM TV(HDMI) OPTICAL/ AUDIO IN

8 SURROUND 8 9 SURROUND MIC VOL+ O REPEAT KARAOKE MIC VOL-

VOL

EQ

AUDIO

•(((-+-)

 $\langle \cdot \rangle$

BRAVIA Sync ONE-TOUCH PLAY Activates One-Touch Play. TV I/() (on/standby)* Turns on the TV or sets it to standby mode. I/() (on/standby) Turns on the system or sets it to standby Function selection buttons Select the playback source. DVD/CD BLUETOOTH USB FM TV (HDMI) **OPTICAL/AUDIO IN** Switches the sound source between OPTICAL IN and AUDIO IN. Selects equalizer mode. SURROUND Selects surround audio output mode. MIC VOL + Increases the microphone volume. AUDIO Selects the audio format/track and FM mode KARAOKE Opens or closes the Karaoke Setup menu MIC VOL -Decreases the microphone volume. Number buttons Enter the title/chapter numbers, preset radio stations, etc PROGRAM Activates program play and presets radio stations. REPEAT Activates repeat/shuffle playback mode.

SETUP TIME

∂ DVD MENU Opens or closes the DVD's menu. MUTING Turns off the sound temporarily. (+/+/+)Moves the highlight to a displayed item. (+) (ENTER) Enters the selected item. VOL +/-Adjusts the volume. Opens or closes the setup menu. DIMMER Switches the brightness of the front panel display between DIM OFF and DIM ON. DISPLAY Opens or closes the Display Menu Switches time information during playback.

Playback operation buttons I (previous/next) ✓</>
→ (fast reverse/fast forward) <I/I► (slow) Activates slow reverse/slow forward when

Is pressed in pause mode. (pause) (play) (stop)

Radio operation buttons PRESET +/-TUNING +/-

> Works with Sony TVs only. Depending on your TV, you may not be able to use some of the buttons

DVD TOP MENU

Opens the DVD's Top Menu

20

Playing a Disc

1 Press DVD/CD. You can also select this function by pressing FUNCTION repeatedly.

2 Press ≜ to open the disc tray.



With the label side up. 4 Press ► to start playback.

Enjoying Karaoke

08 00

The system enters karaoke mode.

2 Start audio playback following the

Files on a Disc/USB Device".

Press MIC VOL +/- to adjust the

the microphone volume to minimum

• Microphone sound is not output when:

- the microphone volume is set to

monaural dynamic type

— you use a microphone other than the

• Before connecting, press MIC VOL - to set

- the microphone is not connected to the

3 Sing along to the audio.

microphone volume.

unit properly.

minimum

Note

Steps in "Playing a Disc" or "Playing

1 Plug a microphone into the MIC jack.

5 Press VOL +/- to adjust the volume

3 Press ↑/↓ to select a folder, then press 🕀 and select a file. 4 Press ► to start playback.

Device

1 Press DVD/CD or USB.

2 Load the source.

For a disc

port.

21

DVD/CD: For a disc.

• USB: For a USB device.

open/close the disc tray.

For a USB device

You can also select the function by

Connect a USB device to the Ψ (USB)

888

105

pressing FUNCTION repeatedly.

Note • Do not remove the USB device during operation. To avoid data corruption or

device.

To add an echo effect

The Karaoke Setup menu appears.

2 Press ↑/↓ to select [Echo Level] , then

3 Press \uparrow/\downarrow to change the echo level.

- Move the microphone away from the

- Lower the microphone volume or echo

Changing the key of a song (Key

You can change the key to suit your vocal

The Karaoke Setup menu appears.

• Depending on the source, you may not be

• The key returns to the original when:

- the playback source is changed.

- a disc or a USB device is removed.

2 Press ↑/↓ to select [Key Control],

3 Press \uparrow/\downarrow to change the key.

range, except when the system is in stop

- Lower the overall volume.

To cancel the echo effect, select echo level

1 Press KARAOKE.

press 🕀

• If howling occurs:

speakers

level

Control)

1 Press KARAOKE.

then press \oplus .

able to change the key.

- the unit is turned off.

mode

Note

26

Note

5 Press VOL +/- to adjust the volume.

USB device

damage to the USB device, turn the system off when connecting or removing the USB • Depending on the disc/USB device, files may not play back.

Playing Files on a Disc/USB Using the Bluetooth function You can listen to music from your *Bluetooth* mobile phone or Bluetooth device over a wireless connection. This system supports the Bluetooth A2DP and AVRCP profiles. For details on Bluetooth wireless technology, see "Bluetooth wireless technology". About the indicator for Bluetooth Place a disc on the tray by pressing **\Lap** to The blue indicator on the front panel display, lights or flashes to show the Bluetooth status. System status The system is pairing/ waiting

The system is connecting Flashes slowly. with a *Bluetooth* device The system has established Lights up. in connection with a Bluetooth device The system is not in the Turns off. Bluetooth mode Note · For details on operation of the connected devices, refer to the operating instructions supplied with the devices. • The *Bluetooth* devices to be connected must support A2DP (Advanced Audio Distribution Profile).

About pairing

the system.

Using a Tuner

1 Press FM.

PROGRAM.

frequency.

1 Press FM.

numbei

Press AUDIO.

To preset radio stations

tune in any of those stations simply by

2 Press and hold TUNING +/- for 2

the desired radio station.

You can preset 20 FM stations. You can then

selecting the corresponding preset number.

seconds to start tuning until you find

"SEARCH +" or "SEARCH -" appears in

station with sufficient signal strength is

"P 01" flashes in the front panel display.

4 Press and hold SHIFT, then press the

To select a preset radio station

2 Press PRESET +/- to select a preset

pressing and holding SHIFT, then

If an FM program is noisy, you can select

monaural reception. There will be no stereo

pressing the number buttons.

effect, but reception will improve.

"STEREO": Stereo reception.

"MONO": Monaural reception

You can also select a preset number by

number buttons to select a preset

the front panel display until a radio

3 Press and hold SHIFT, then press

5 Press 🕀 to store the station

Pairing is an operation where Bluetooth

beforehand. Use the procedure below to pair

the system with your Bluetooth device. Once

a pairing operation is performed, it does not

· Pairing information is deleted by repairing

is to be repeated in the cases listed below

have to be performed again. However, pairing

devices are registered with each other

• The connection history with this system is deleted on the connected device. The system is reset to its default status Pairing this system with a Bluetooth device

Pairing is performed as described below. Place the system and a Bluetooth Indicator device within 1 meter of each other. Flashes quickly. 2 Press BLUETOOTH "BT READY" appears in the front panel display.

Set the Bluetooth device in pairing 3 For details on setting the Bluetooth device

new information.

· This system can be paired with up to eight

devices. If a further device is paired, the

pairing information of the device with the

oldest connection date is overwritten with

in pairing mode, refer to the operating instructions supplied with the device. Select "SONY DVD HOME THEATRE SYSTEM" on the Bluetooth device

22

display. On some Bluetooth devices, the list may not be displayed. If a Passkey is requested, enter "0000". Perform this step within 5 minutes,

otherwise pairing will be canceled. 5 Once pairing is completed, the device is automatically connected to the

Convenient Functions

About the Control for HDMI

You can control a TV compatible with the

Control for HDMI function by connecting it

With one touch of ONE-TOUCH PLAY on

input is switched to the system; playback of

When you turn the TV off by using the I/\odot

outton on the TV's remote control or TV

 I/\odot on the system's remote control, the

You can switch the audio output to either

the TV speakers or this system's speakers

You can set the system to turn off at a preset

time, so you can fall asleep listening to music

Press and hold SHIFT, then press SLEEP.

Each time you press this button, the minute

display (the remaining time) changes by 10

A countdown of the last 20 seconds until the

unit turns off appears in the front panel

Press and hold SHIFT and SLEEP for 3

On cleaning discs, disc/lens cleaners

• Do not use cleaning discs or disc/lens

seconds. The remaining time until the unit

turns off appears in the front panel display.

To check the remaining time

system turns off automatically.

the remote control, the system and your

TV automatically turn on and the TV's

function ("BRAVIA" Sync)

to the system via an HDMI cable.

a disc starts automatically.

• System Power Off

System Audio Control

via the TV's menu.

Sleep timer

display.

27

Available features

· One-Touch Play

system. When the Bluetooth connection is made correctly, the indicator of the front panel display lights and the pairing information is stored in the system.

• Use a Bluetooth device such as Bluetooth mobile phone in an easily visible place in the same room where the main unit is placed. • If Wi-Fi equipment is used, Bluetooth communication may become unstable. In that case, use the Bluetooth device as close

as possible to the main unit. Sound may be interrupted because of a problem with the Bluetooth device. • "Passkey" may be called "Passcode," "PIN code," "PIN number" or "Password," etc., depending on the device. • The pairing standby status of the system is canceled after about 5 minutes and the indicator on the front panel display turns

off. If pairing is not successful, repeat the procedure from step 1. Listening to music with the

established.

panel display

disc

or track.

repeatedly.

panel display

To cancel the sleep timer function

Press and hold SHIFT, then press SLEEP

repeatedly until "OFF" appears in the front

To view information about the

remaining time of the current title, chapter,

Each time you press and hold SHIFT, then

press TIME while playing the disc, the

displayed item changes depending on the

To change the Brightness of the

You can change the brightness of the front

Press and hold SHIFT, then press DIMMER

Front Panel Display

You can check the playing time and

Press and hold SHIFT, then press TIME

Bluetooth connection The system supports SCMS-T content

protection. You can listen to a Bluetooth device that supports SCMS-T content Before starting music playback, check the

following • The Bluetooth function on the Bluetooth device is on.

• The pairing procedure is completed on both this system and Bluetooth device. **1** Press BLUETOOTH. "BT AUDIO" appears in the front panel

display. device. 2 Start the *Bluetooth* connection from the Bluetooth device. The indicator of front panel display lights

3 Start playback on the Bluetooth device. 4 Adjust the volume.

> Set the volume of the Bluetooth device to a moderate level and press the VOL +/buttons on the remote control. Tip When you press >> on the remote control

in step 2, the Bluetooth connection will be made with the device that was connected last time. Note • If the source device has a bass boost function or equalizer function, turn them off. If these functions are on, sound may be distorted. • In the following cases, you will have to make the Bluetooth connection again. The power of the unit does not turn on. The power of the Bluetooth device does not turn on, or the Bluetooth function is off.

The *Bluetooth* connection is not established. • If more than one device paired with the unit is being played back, sound will be heard from just one of those devices. Finishing the Bluetooth connection

the operations listed below. • Operate the *Bluetooth* device to terminate the connection. For details, refer to the operating instructions supplied with the

• Turn off the *Bluetooth* device. • Turn off the system. • Select any function except "BT AUDIO" when the Bluetooth connection is

23

Terminate the Bluetooth connection by any of

speakers. To play a VIDEO CD with PBC functions When you start playing a VIDEO CD with for your selection appears. To play without using PBC In stop mode, press and hold SHIFT, then

the language.

VIDEOs only.)

DVD VIDEOs only.)

To change angles When playing a DVD/VCD Press 🖱 DISPLAY during playback to select 1 Press 🗂 DISPLAY during play. the desired angle. (This applies to DVD The Display Menu appears on the TV 2 Press ↑/↓ to select an option, then To display subtitles Press 💬 DISPLAY during playback to select press (+). 3 Press and hold SHIFT, then press the the desired subtitle language. (This applies to number buttons to jump to the desired option. To change the sound When playing a CD 1 Press 🖱 DISPLAY during play. Press AUDIO repeatedly during playback to select the desired audio signal. The selection display appears on the TV - When the system is playing a DVD screen. VIDEO recorded in multiple audio 2 Press and hold SHIFT, then press the formats (PCM, Dolby Digital, or MPEG number buttons to select the desired audio), you can change the audio format. I track. the DVD VIDEO is recorded with multilingual tracks, you can also change

To search for a title/chapter/

track/scene, etc.

When playing a video/music/photo file 1 Press DISPLAY during play. - With a VIDEO CD or CD, you can select The selection display appears on the TV the sound from the right or left channel screen. and listen to the sound of the selected 2 Press and hold SHIFT, then press the

channel through both the right and left number buttons to select the desired number. To play in programmed order

Select the tracks to play in the order you want (only for CDs). PBC (Playback control) functions, the menu 1 Press and hold SHIFT, then press

Other Playback Operations

press the number buttons to select the track 2 Press and hold SHIFT, then press the number you want.

[4:3 Letter Box]: Displays a wide picture with

[4:3 Pan Scan]: Displays a full-height picture

on the entire screen, with trimmed sides

[OSD Lang] (On-Screen Display)

TV screen.

cable

cable

[Off]: Off.

[TV Audio]

HDMI cable.

[TV(HDMI)]

[Control for HDMI]

You can switch the display language on the

This function is available when you connect

the system and a TV that is compatible with

the Control for HDMI function via an HDMI

black bands on the top and bottom

3 Press ←/↑/↓/→ to select [Start] to play the program. 24

The Program Menu display appears on

number buttons to select the desired

PROGRAM.

the TV screen.

track.

Note

[OPTICAL IN] The system can receive the digital audio • When the resume playback memory is full, signal of the TV via an optical cable. AUDIO IN] The system can receive the analog audio [Auto Standby] signal of the TV via an analog cable [On]: Enters standby mode automatically when in stop, pause, no disc, or eject mode • This function is available only when for more than 20 minutes

[HDMI Audio] automatically. This setting is only required if you are using the HDMI OUT jack for an audio connection

still enjoy sound output via the speaker audio output will be changed to PCM

[PCM]: HDMI audio output will be downmixed to linear PCM (2-channel)

do not operate the system for about 15

[On]: You can operate mutually between [Last Memory] components that are connected via an HDMI

This function is available when you connect the system and a TV that is compatible with the Control for HDMI function, via an

The system can receive the digital audio signal of the TV via an HDMI cable.

29

[Control for HDMI] is set to [On]. [Off]: The unit does not enter standby mode

Speaker Setup Page [Level] [Off]: Turns off HDMI audio output. You can You can adjust the sound level of all the

[All]: The HDMI audio output format will be same as the audio stream being played. If the playback audio format is not supported, the

utomatically

[Off]: Off. This system recalls the point where you stopped the disc the last time it was played

next time you insert the same disc [On]: The system stores the resume points in [Off]: The system does not store the resume points in memory. Playback restarts at the

resume point only for the current disc in the

all speakers • "STANDARD" (A.F.D. STANDARD): The system discriminates the sound format of the source and presents sound as it was recorded/encoded "DOLBY PL" (PRO LOGIC): Performs Dolby Pro Logic decoding. • "2CH ST" (2CH STEREO): All formats are downmixed to 2 channels. Note • Depending on the playback stream, the surround settings may not be effective 25

To play repeatedly/shuffle, etc.

Press and hold SHIFT, then press REPEAT

• "REP CHP": Repeats the current chapter.

repeatedly to select the desired playback

mode. The selected mode appears in the

"REP TT": Repeats the current title.

• "REP TRK": Repeats the current track.

• "SHUFFLE": Plays the contents once in

• "SHUF REP": Repeats shuffle play.

• "FOLDER": Plays the current folder

• "SINGLE": Plays the current file.

depending on the disc or file.

• "RANDOM": Plays all files in random

• "REP ONE": Repeats the current file.

• "REP FLD": Repeats the current folder.

• The selectable modes and their order differ

the resume playback point for the earliest

disc is deleted.

speakers and the subwoofer.

dB to +0.0 dB.

-6.0 dB to +6.0 dB.

-6.0 dB to +0.0 dB.

from -6.0 dB to +6.0 dB.

dB to +6.0 dB.

[Distance]

[L]: Adjusts the sound level of left speaker. It

is possible to adjust the parameter from -6.0

[C]: Adjusts the sound level of center speake

[R]: Adjusts the sound level of right speaker.

surround speaker. It is possible to adjust the

[SL]: Adjusts the sound level of left surround

speaker. It is possible to adjust the parameter

[SW]: Adjusts the sound level of subwoofer. It

is possible to adjust the parameter from -6.0

If you move one of the speakers, be sure to

set the parameters of the distance from the

[L/R]: Adjusts the distance of the left/right

• Press I/\bigcirc to turn off the system, and

- Are the + and - speaker cords short-

- Is anything blocking the ventilation

check the following items after

"STANDBY" disappears:

holes of the system?

listening position to speakers.

from 1.0 m to 7.0 m.

It is possible to adjust the parameter from

[SR]: Adjusts the sound level of right

parameter from -6.0 dB to +6.0 dB.

It is possible to adjust the parameter from

• "REP OFF": The system returns to normal

random order until all the contents have

• "REP ALL": Repeats all titles.

front panel display.

playback mode.

been played.

Note

[C]: Adjusts the distance of the center speaker. This parameter can be set between 1.6 m shorter and equal to the L/R channel

Selecting the Sound Effect

To select an equalizer setting

Press EQ to display the current mode. While

repeatedly until the desired mode appears on

the front panel display."AUTO": Automatically selects the movie

or music sound mode based on the disc

• "MOVIE": Enjoyable, powerful bass and

sound effects; recommended for movies

• "MUSIC": Well-balanced low and high

recommended for watching dramas or

• "GAME": Enhanced low and high range;

To select a surround setting

Press SURROUND to display the current

mode. While the current mode is displayed,

press SURROUND repeatedly to select the

desired surround audio output mode. The

selected mode appears in the front panel

• "MULTI" (A.F.D. MULTI): When the

source is 2 channel, sound is output from

recommended for action or shooting

range; recommended for music.

"TV": Clear, mid-range vocals;

comedies.

games, etc.

display

the current mode is displayed, press EQ

[SL/SR]: Adjusts the distance of the left/right surround speaker. This parameter can be se

between 5.0 m shorter and equal to the L/R channel setting. [Center Speaker] [On]: Activates the center speaker

Off]: Deactivates the center speaker [Sur. Speaker] [On]: Activates the surround speakers [Off]: Deactivates the surround speakers.

[Test Tone] The speakers will emit a test tone to set the Level

On]: The speakers emit the test tone [Off]: The speakers do not emit the test tone. Tip

• To adjust the volume of all speakers, press VOL +/- on the unit or on the remote

control. • Press $\leftarrow / \uparrow / \checkmark / \Rightarrow$ repeatedly to select the speaker and the desired level or distance.

[Audio DRC] You can compress the dynamic range of the sound track. [Off]: No compression of dynamic range. [Standard]: The system reproduces the sound track with the kind of dynamic range that the

recording engineer intended. [A/V Sync]

If sound does not match the picture, you can adjust the delay between picture and sound. [Off]: Off. picture and sound. speakers. It is possible to adjust the parameter

[On]: You can adjust the delay between the Note • Depending on the input stream, [A/V Sync] may not be effective

2 Press and hold SHIFT, then press the

1 Press and hold SHIFT, then press the

2 Press and hold SHIFT, then press the

3 Press and hold SHIFT, then press the

number buttons to enter a new 6-

digit password in the [New Password]

number buttons to enter the new 6-

digit password again in the [Confirm

PWD] section to confirm your entry.

[Old Password] section.

4 Press [OK] to exit the menu.

number buttons to enter "000000" or

your last set 6-digit password in the

password.

[Default]

[Password]

the password

number buttons to enter your 6-digit

Video Setup Page

[HDMI Resolution] You can select the type of video signal that is output from the HDMI OUT jack.

1 Press ↑/↓ to select a rating level from Precautions 1 to 8 or [Off], then press 🤆

cleaners (including wet or spray types). On placement These may cause the apparatus to • At high volume, over long periods of time, the cabinet becomes hot to the touch. This malfunction.

This system can only play back a standard circular disc. Using neither standard nor circular discs (e.g., card, heart, or star shape) may cause a malfunction Do not use a disc that has a commercially attached such as a label

On heat radiation

This is normal. Please consult your nearest

Sony dealer if you have any questions

or ring.

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the

Bluetooth

There is no sound. • Make sure this system is not too far from the Bluetooth device, or this system is not

connected securely

Picture

TV input jack.

input of the TV.

system.

• The system is not selected via the video

• Check the output method on your

Even though you set the aspect ratio in

• The aspect ratio on the disc is fixed

picture does not fill the TV screen.

[TV Display] of [General Setup Page], the

There is no picture. • The video connecting cords are not

"PROTECT" appears in the front pane display. • Connect all channels to their

correctly

circuited?

Operation

A JPEG image file cannot be played. • It is larger than 2,048 (width) \times 1,536 (height) in normal mode, or more than

A video file cannot be played.

720 (width) × 576 (height).

The name of a folder or file is not

displayed correctly.

playback.

function

• The video file resolution is larger than

• The system can only display numbers

and letters of the alphabet. Other

A disc does not start playing from the

During stop, press
and then start

• Program play has been selected. During

stop, press and then start playback.

• Shuffle play has been selected. During

stop, press \blacksquare and then start playback.

• Disconnect the AC power cord (mains

lead) from the wall outlet (mains), then

The system does not work normally.

reconnect after several minutes.

[General Setup Page] to [On].

with the component.

The Control for HDMI function does not

• Set the [Control for HDMI] setting in

Make sure that the connected compone

is compatible with the Control for HDMI

• Check the connected component's setting

to the operating instructions supplied

for the Control for HDMI function. Refer

characters are displayed as [_].

• Resume Play has been selected.

2,000,000 pixels in progressive format which is mainly used on Internet Web

30

[Screen Saver] [On]: The screen saver image appears if you

and resumes playback from that point the

28

General Setup Page

[TV Display] [16:9]: Select this when you connect a wide screen TV or a TV with a wide mode function

Using the Setup Display

Displayed items vary depending on the

Press DVD/CD, then eject the disc.

3 Press ←/→ to select one of the setup

menu categories, then press 🕀

4 Press ↑/↓ to select a setup item, then

5 Select the option you wish to change

to the previously selected item.

Selected category Setup categories

6 Press SETUP to turn off the menu

and press 🕀 to confirm and go back

The default setting is underlined.

The setup menu appears.

such as picture and sound.

country model.

2 Press SETUP.

press → or (+).

You can make various adjustments to items

Selected setting Options

signal for the connected TV [480p/576p]: The system outputs $720 \times 480p$ or $720 \times 576p^*$ video signals. [720p]: The system outputs 1280 × 720p* video signals [1080i]: The system outputs $1920 \times 1080i^{*}$ video signals [1080p]: The system outputs $1920 \times 1080p^*$ video signals. * i: interlace, p: progressive

Preference Page

[TV Type] The TV type default setting varies depending on the area [PAI]: For a PAL-system TV [NTSC]: For an NTSC-system TV [Audio] You can select the preferred audio language for DVDs with multiple sound tracks.

[Subtitle] You can switch the language of the subtitles recorded on a DVD VIDEO [Disc Menu]

You can switch the language for a disc's menu [Parental] You can restrict playback of DVDs that have

ratings. Scenes may be blocked or replaced with different scenes.

the cabinet should be avoided. Do not place This feature enables you to reset all the setup the system in a confined space where nenu options and your personal settings to ventilation is poor as this may cause the factory defaults, except for your password overheating. for the [Password] and [Parental] items • Do not install the system near heat sources Press \oplus to confirm the default reset. such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, Password Setup Page mechanical vibration, or shock. • Do not install the system in an inclined position. It is designed to be operated in a The default password is "000000." To change horizontal position only.

• Do not place heavy objects on the system On operation

• If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.

• If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further. On cleaning

• Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild

Frequency band

Modulation method

Compatible Bluetooth profiles*

detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine. If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

2.4 GHz band

(2.4000 GHz

2.4835 GHz)

FHSS (Freq Hopping

Spread Spectrum)

A2DP (Advanced

Audio Distribution

32

Caution: This system is capable of holding a still video image or on-screen display mage on your television screen ndefinitely. If you leave the still video mage or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this. On moving the system Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (maine) On handling discs

On your TV's color

IMPORTANT NOTICE

• To keep the disc clean, handle the disc by

its edge. Do not touch the surface. Do not stick paper or tape on the disc • Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside

the car. On cleaning discs

• Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. • Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

problem before requesting repairs. Should any problem persist, consult your nearest Sonv dealer. Note that if service personnel changes some Due to the slim type of main unit design, you parts during repair, these parts may be may feel some heat on the top of the unit.

retained Power The power is not turned on. • Check that the AC power cord (mains

lead) is connected securely.

Sound

The sound doesn't output from the surround speakers. • Press SURROUND repeatedly and select "DOLBY PL" (PRO LOGIC) to output sound from all speakers. (Depending on the media, sound may not be output from the surround speakers.)

The [Speaker Setup Page] items cannot be changed. • Press DVD/CD, then eject the disc

There is no sound. Severe hum or noise is heard.

SPEAKERS terminals, straighten and extend the contact area of each speaker cord, then reconnect the speaker cords to the SPEAKERS terminals. Clean the disc.

The sound loses stereo effect when you

• Set the audio setting to [Stereo] by pressing AUDIO.

e from a Wi-Fi network, other 2.4 GHz wireless device. or microwave oven. • Check that the Bluetooth connection is made properly between this system and the Bluetooth device. • Pair this system and the Bluetooth device • Keep this system away from metal objects or surfaces. • Make sure this system is in *Bluetooth* mode

distance is short.

the obstacle.

as near as possible.

Re-position this system

device and perform pairing again.

Color irregularity occurs on the TV screen. Sound skips or the correspondence The system's speakers contain magnet parts, so magnetic distortion may occur • If a device that generates electromagnetic When color irregularity occurs on the radiation, such as a Wi-Fi network, other TV screen, check the following items. Bluetooth device(s), or a microwave oven

• Install the speakers at least 0.3 meters is nearby, move away from such sources. from your TV set. Remove any obstacle between this system • If the color irregularity persists, turn off and Bluetooth device, or move away from the TV set once, then turn it on after 15 to 30 minutes. • Locate this system and *Bluetooth* device • Reposition the speakers farther away

from your TV set The [TV Type] setting does not match • Re-position the Bluetooth device. your TV.

Connecting cannot be done. [TV Type] can be reset according to the • Perform pairing again. following procedure: Pairing cannot be done. 1. Press \triangleq to take out the disc • Bring this system and the Bluetooth 2. Press (DISPLAY. device closer together. 3. Press (+). [TV Type] will be reset. • Delete the system from your Bluetooth

39

• After checking the above items and fixing any problems, turn on the system. If the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer. A disc cannot be ejected and "LOCKED" appears in the front panel display. • Contact your Sony dealer or local authorized Sonv service facility. Radio stations cannot be tuned in. • Check that the antenna (aerial) is connected securely. Adjust the antenna

(aerial) or connect an external antenna (aerial) if necessary A disc does not play. • The region code on the DVD does not

match the system. • Moisture has condensed inside the unit and may cause damage to the lenses. Remove the disc and leave the unit turned on for about half an hour.

A DATA CD/DATA DVD cannot be played. • The DATA CD is not recorded in ISO 9660 Level 1/Level 2, or Joliet

• The DATA DVD is not recorded in UDF (Universal Disk Format).

35

40

USB device

"OVERLOAD" appears in the front panel display. • Remove the USB device from the ψ (USB) port. Make sure there is no problem with the USB device. The USB device (audio file/JPEG image file) cannot be played. • Files that are encrypted or protected by

passwords, etc., cannot be played.There is no playable file in the USB device.

3 ohms, 100 Hz) AUDIO IN and OPTICAL IN jacks

Specifications

POWER OUTPUT (rated):

POWER OUTPUT (reference):

Front L + Front R 100 W + 100 W (at

THD)

3 ohms, 1 kHz, 1%

Front L/Front R/

Center/Surround L/

Surround R: 167 W

(per channel at

3 ohms, 1 kHz)

Amplifier Section

CD/DVD System

31

Laser Diode Properties Emission Duration Continuous Laser Output*: Les than 44.6 μW * This output is the value measurement at a

distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture

USB Section ∲ (USB) port:

Maximum current: 500 mA Bluetooth section

Communication system Bluetooth Specification

version 2.1 + EDR (Enhanced Data Rate) Bluetooth Specification Output Power Class 2

nication range

10 m*1

Line of sight approx.

Profile) AVRCP 1.0 (Audio Video Remote Control Profile) Supported Codecs*3 SBC*4 Subwoofer: 165 W (at nission range (A2DP) 20 Hz - 20,000 Hz (Sampling frequency 44.1 kHz) ¹ The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, cordless phone, reception sensitivity, operating system, software application, etc. ² Bluetooth standard profiles indicate the purpose of Bluetooth communication between devices. *3 Codec: Audio signal compression and conversion forma *4 Subband Codec **Tuner Section** PLL quartz-locked System digital synthesizer 87.5 MHz -Tuning range 108.0 MHz (50 kHz FM lead antenna Antenna Video Section VIDEO: Pin jack Outputs HDMI OUT: HDMI 19-pin

Speakers DAV-DZ350 (SS-TS124) (approx.) 92 mm \times 272 mm \times 97 mm (w/h/d) incl projecting parts 0.65 kg Mass (approx.) DAV-DZ650/DAV-DZ950 (SS-TS125) sions (approx.) 260 mm \times 1.125 mm \times 260 mm (w/h/d) incl. projecting parts 2.7 kg Mass (approx.) Cente SS-CT123 ions (approx.) 241 mm imes 92 mm imes85 mm (w/h/d) incl projecting parts Mass (approx.) 0.60 kg DAV-DZ350/DAV-DZ650 (SS-TS123) ions (approx.) 91 mm \times 203 mm 92 mm (w/h/d) incl projecting parts Mass (approx.) 0.55 kg DAV-DZ950 (SS-TS125) rox.) 260 mm × 1.205 mm × 260 mm (w/h/d) incl. projecting parts 2.7 kg Mass (approx.) Subwoofer SS-WS123 Dimensions (approx.) 230 mm \times 365 mm \times 360 mm (w/h/d) incl.

projecting parts

Standby: 0.3 W*

6.3 kg

50/60 Hz

Power requirements 220 V - 240 V AC,

Power consumption On: 70 W

Mass (approx.)

General

37

* Valid when the system is in the following - [Control for HDMI] is set to [Off]. Dimensions (approx.) 430 mm × 54 mm × 306 mm (w/h/d) incl.

projecting parts 2.7 kg Mass (approx.) Design and specifications are subject to

change without notice.

• Remove the speaker cords from the

play a VIDEO CD or CD.

33

38