


# Safeguarding Valuables

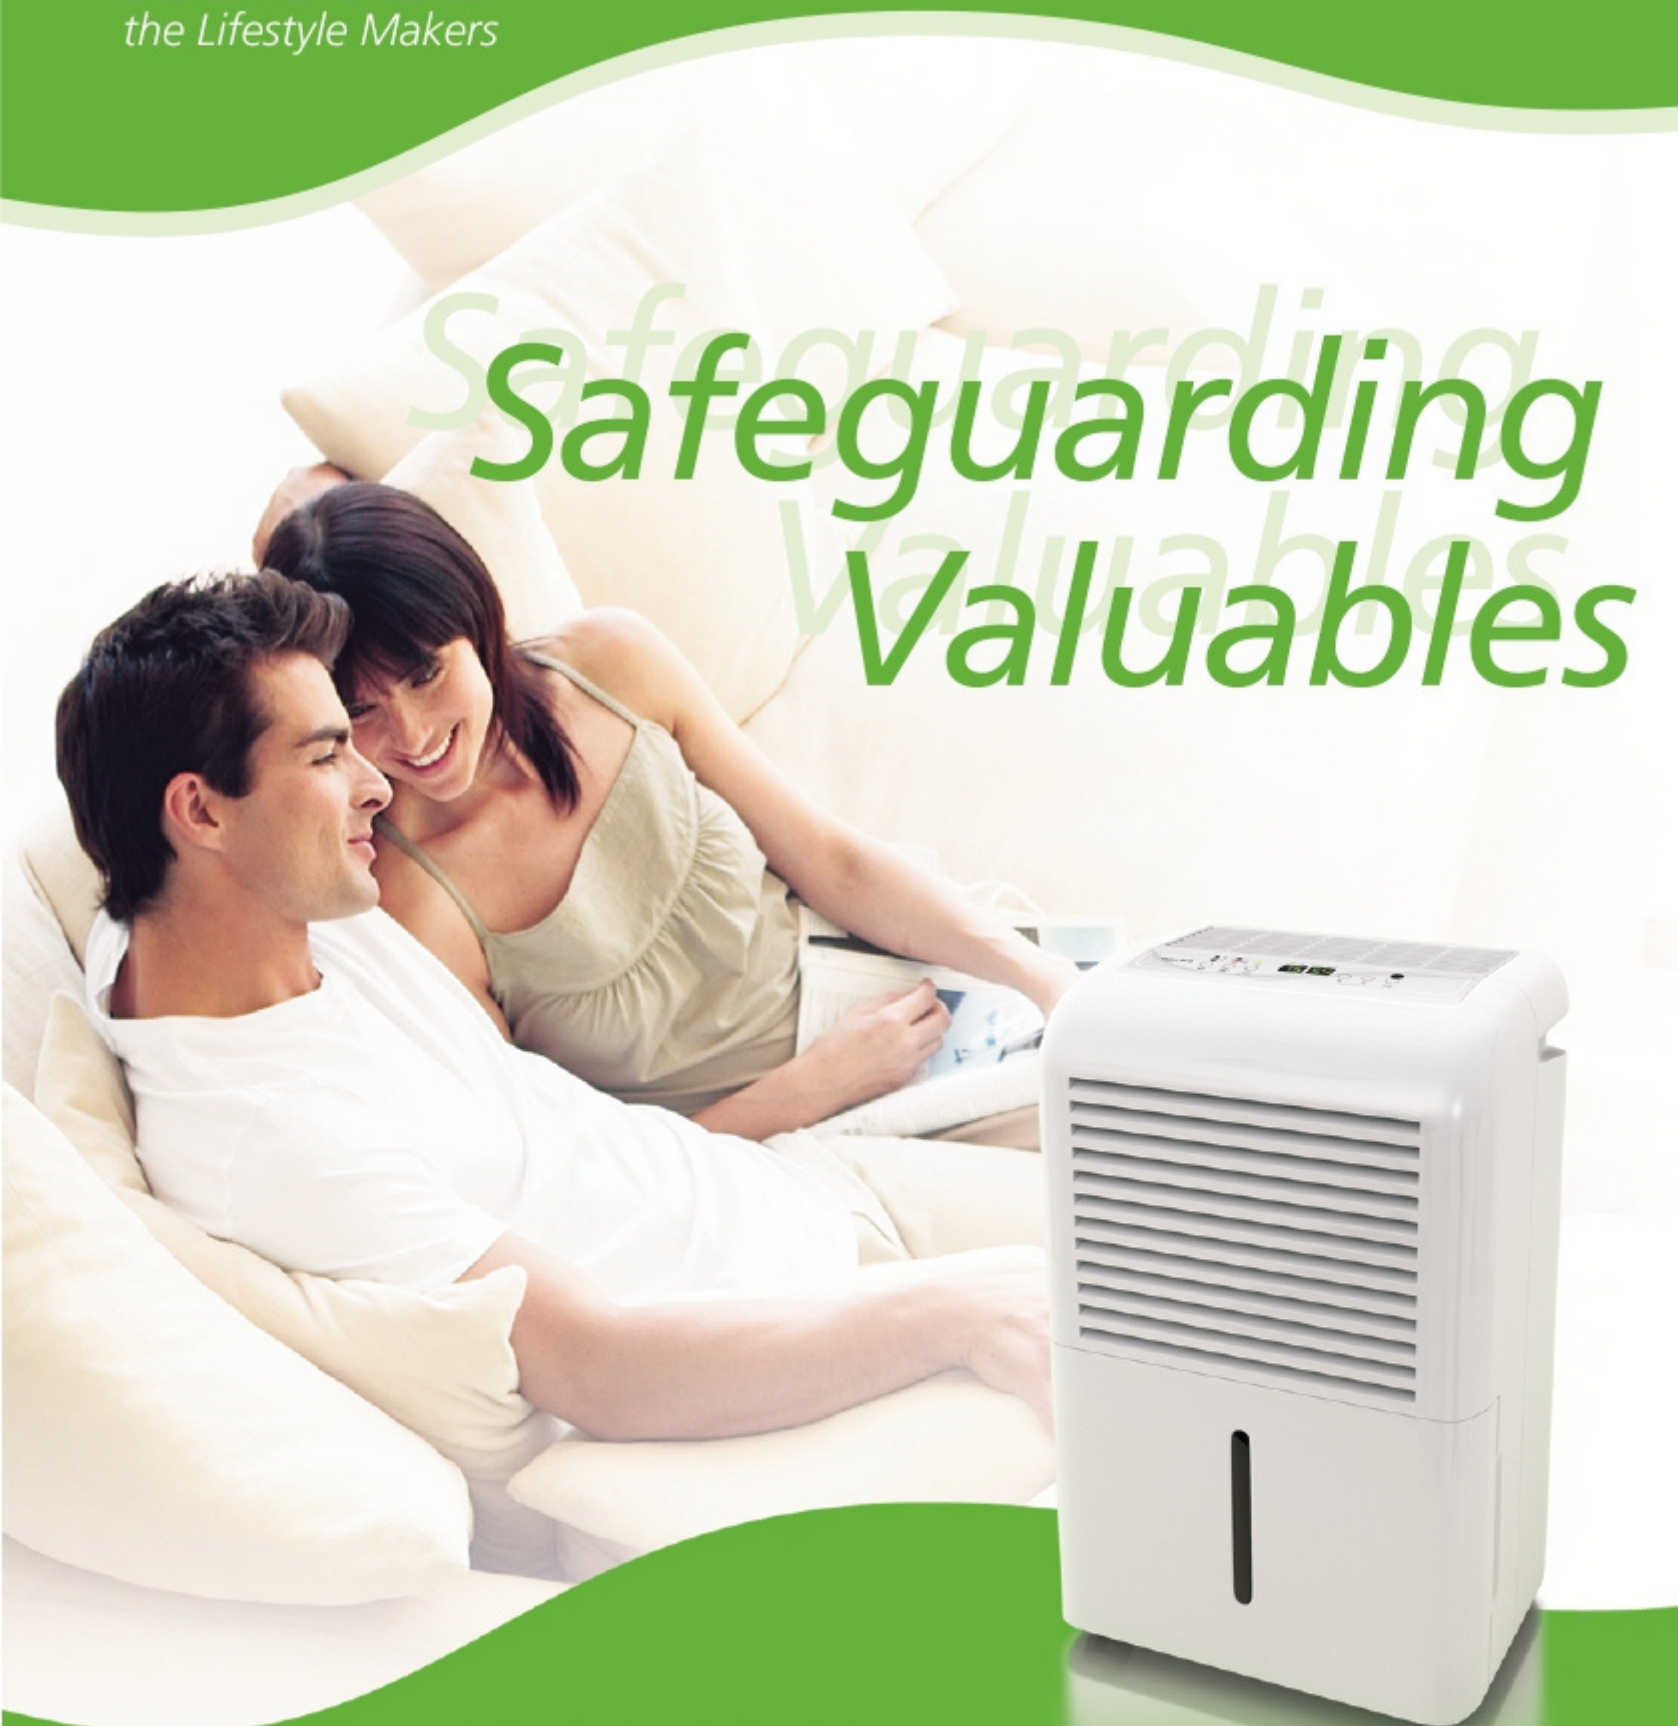

PREFERRED  
HUMIDITY  
SETTINGS



AUTO  
HUMIDITY  
SENSOR



AUTO STOP  
WITH FULL TANK  
INDICATOR



EXTENSIVE  
COVERAGE  
AREA



CFC FREE  
REFRIGERANT



PRE-FILTER  
SCREEN



CONTINUOUS  
DRAINAGE  
OPTION



ROTARY  
COMPRESSOR



EASY ROLL  
CASTORS

## DEHUMIDIFIER ND 690 OPERATING INSTRUCTIONS &

Please read instructions before using the Dehumidifier

# CONTENTS

PRODUCT DESCRIPTION	2
CONTROL PANEL DESCRIPTION	3
TECHNICAL SPECIFICATIONS	3
FEATURES	4
Auto Humidity Sensor .....	4
Humidity Setting Control .....	4
Defrost Mode .....	4
Auto Shut-off .....	4
Programmable Timer .....	4
Fan Speed Option .....	5
Temperature & Timer Display .....	5
Room & Humidity Setting Display .....	5
Nylon Mesh Pre-Filter Screen .....	5
Continuous Drainage Option .....	6
USING THE <b>novita</b> DEHUMIDIFIER	6
Empty the water tank .....	6
CLEANING & MAINTENANCE	7
Cleaning the <b>novita</b> Dehumidifier ND 690 .....	7
Cleaning the Nylon Mesh Pre-Filter Screen .....	7
SAFETY PRECAUTIONS	7
SAFETY INSTRUCTIONS	9
TROUBLESHOOTING	9


This product includes:

- **novita** Dehumidifier ND 690
- **novita** Dehumidifier ND 690 Operating Instructions


\* Please contact us immediately if any of the above-mentioned items are not included

PRODUCT DESCRIPTION


FRONT VIEW

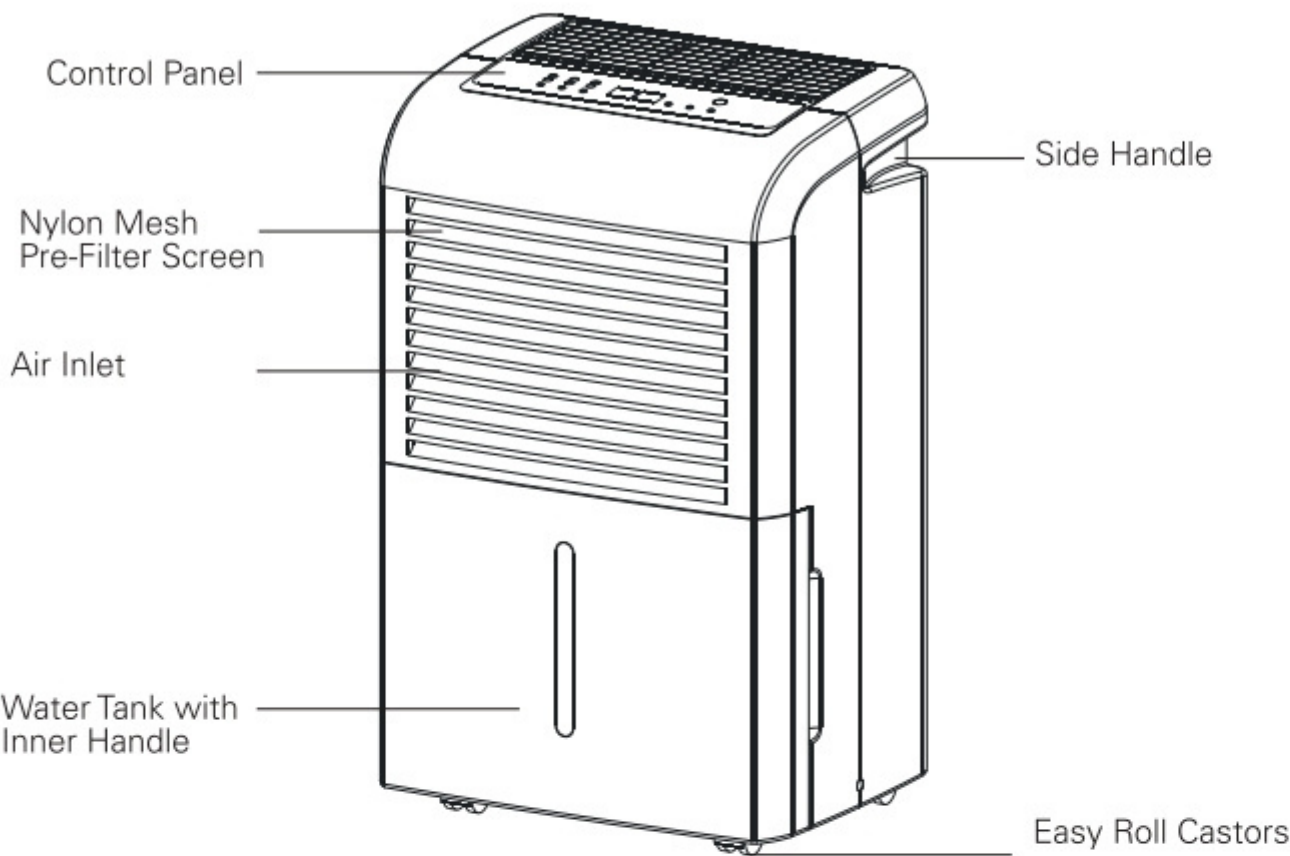

BACK VIEW

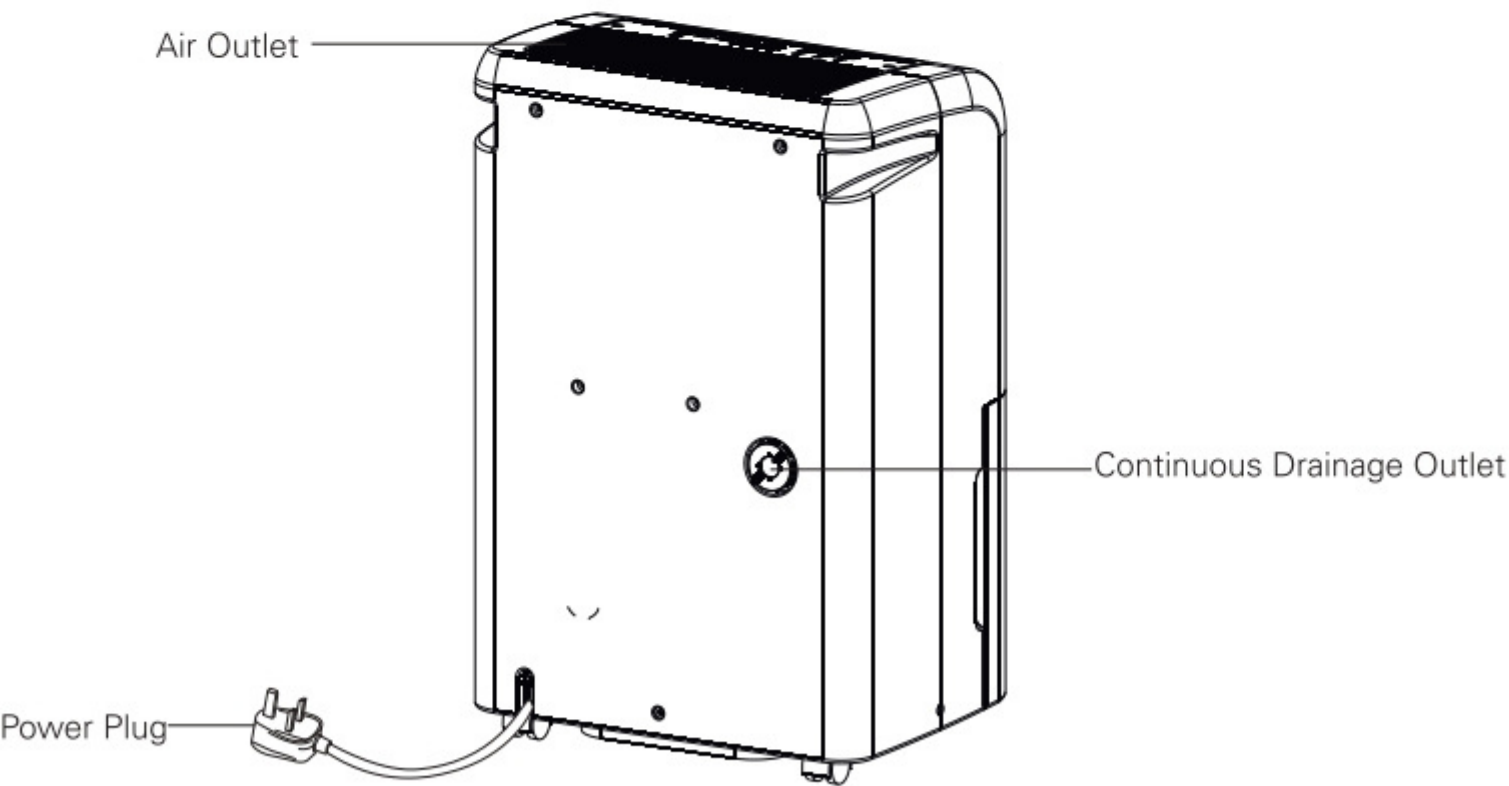

# CONTROL PANEL DESCRIPTION

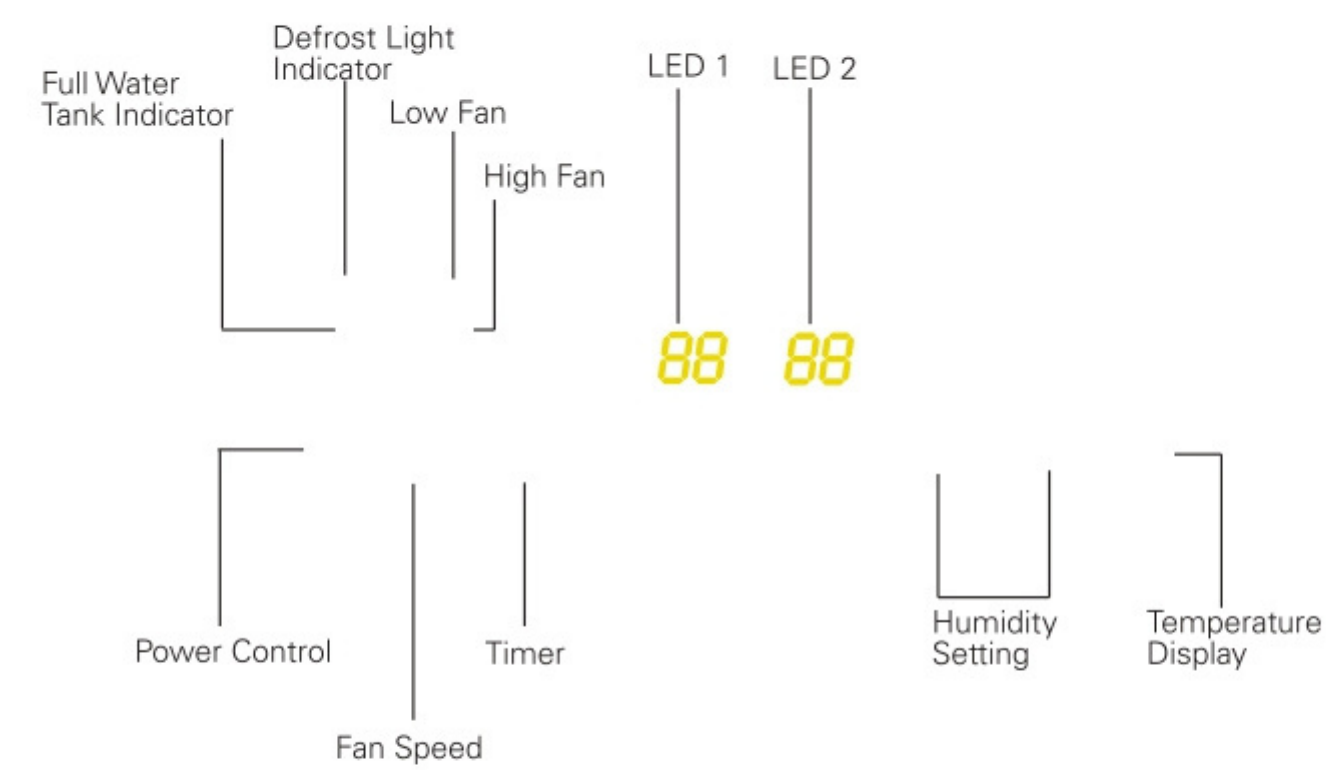

# TECHNICAL SPECIFICATIONS


Voltage / Frequency	220-240V / 50Hz
Power Consumption	740 Watts
Extraction (30°C, 80% RH)	50 litres/day
Humidity Setting	Available
Auto Humidity Setting	Available
Easy Roll Castors	Available
Running Temperature	5°C - 35°C
Compressor	Rotary
Coolant	R-410 A
Empty Weight	20 kg
Dimensions	600mm (h) x 388mm (w) x 282mm (d)
Continuous Drainage	Available
Recommended Coverage	Up to 900 sq. ft. or 83m2
Water Tank Capacity	8 litres
Optional Product Accessory	PE Hose (18mm external diameter)

## FEATURES

### Auto Humidity Sensor


Inbuilt hygrosat detects the humidity level of the surrounding and compares it to the humidity level set. The compressor stops while the fan continues to run when the desired humidity level is achieved. Compressor will reactivate when humidity level of the surrounding surpasses the desired humidity level.

### Humidity Setting Control

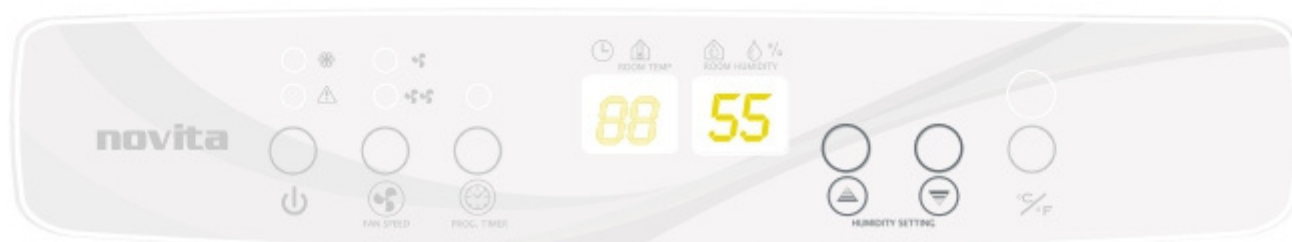


The humidity level can be set according to individual's desire within a range of 30% - 80% RH in intervals of 5% RH.

### Defrost Mode

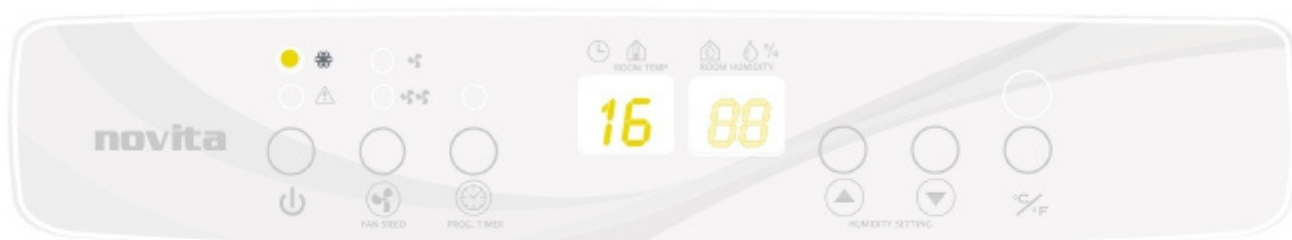

Defrost mode will be activated automatically when room temperature drops to 16°C and below. Defrost light indicator illuminates as sensor detects the drop in temperature.


### Auto-Shut Off

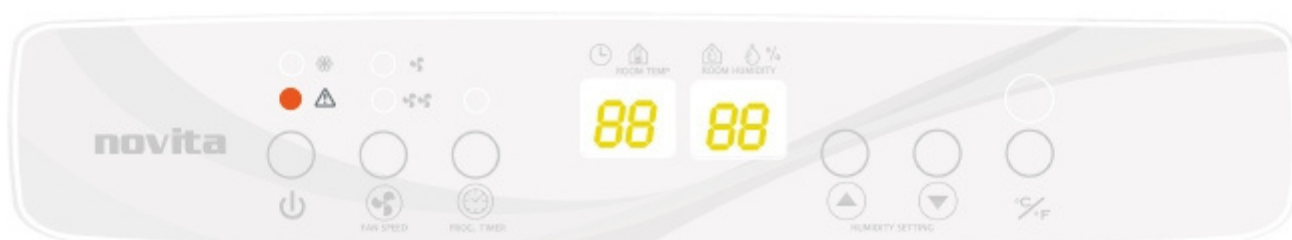




Unit shuts off automatically and Full water tank indicator illuminates in the following circumstances:


- Water tank is full
- Water tank is not placed properly
- Water tank is removed
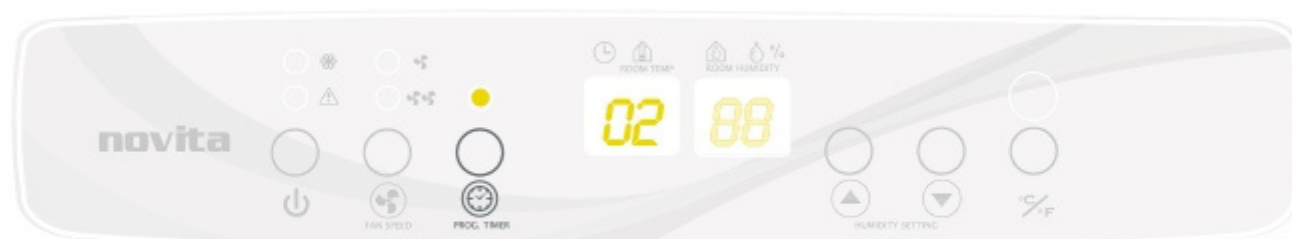
### Programmable Timer




The timer is activated when  is pressed.   set the timer in intervals of 1 hour and can be programmed to work from 0 (to turn off timer) to 24 hours. Timer can be applied to both ON and OFF modes: In OFF mode, the unit can be programmed to start operating according to the timer set. In ON mode, the unit can be programmed to stop operating according to the timer set.

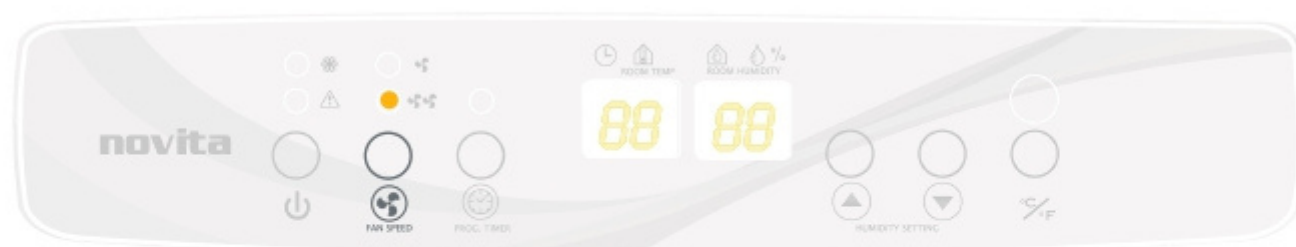

### Fan Speed Option




Fan speed alternates between high or low when  is pressed.

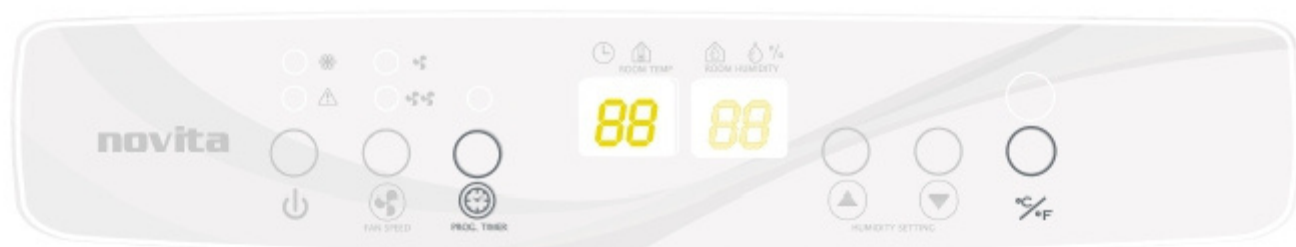

### Temperature & Timer Display



LED 1 displays the temperature (default) and timer setting. Temperature of the room/surrounding is displayed in Degree Celsius (default) / Fahrenheit when C/F is pressed. Timer setting will be shown when   is pressed. LED 1 switches back to temperature display 10 seconds after timer is set.
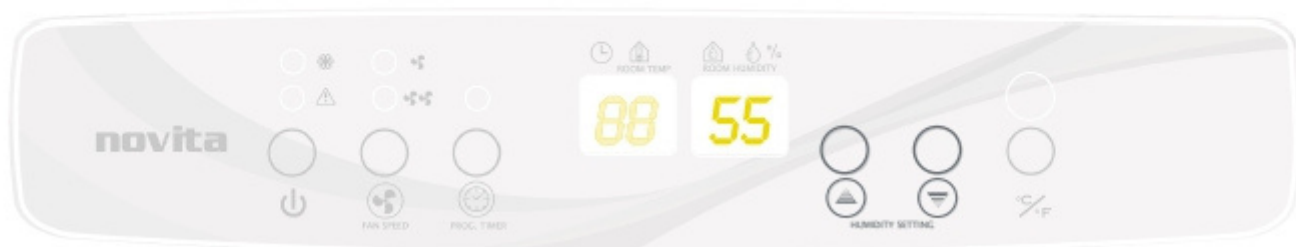
### Room & Humidity Setting Display



LED 2 displays the current (default) and desired humidity level. Desired humidity level is shown when   is pressed. LED 2 switches back to current humidity level display 10 seconds after desired humidity level is set.

### Nylon Mesh Pre-Filter Screen



Pre-filter sieves out contaminants from the air that is drawn into the unit. This increased the efficiency of the unit and helps to filter the air that is released back into the surroundings.

## Continuous Drainage Option

Continuous drainage option allows easy removal of collected water instead of manually emptying from the water tank.

*Using the continuous drainage option:*

- 1) Turn off the power supply and remove the power plug from the power outlet.
- 2) Remove the water tank from the unit.
- 3) Unscrew the continuous drainage cap and remove the rubber stopper.  
(Both items can be stored in the water tank for safekeeping)

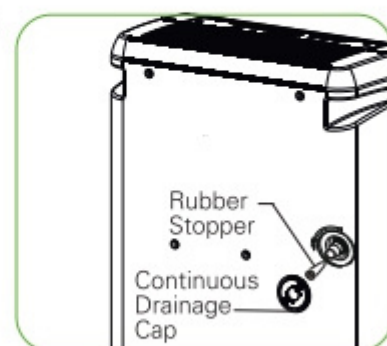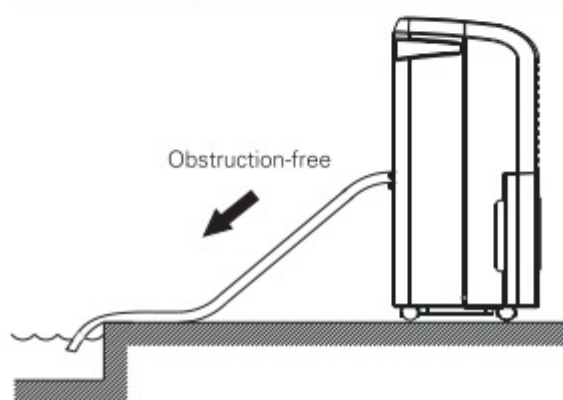

- 4) Insert PE hose ( 18 mm external diameter) through the drainage outlet. Ensure that the hose is placed in a downward angle.

- 5) Place the water tank back to the unit. The dehumidifier is now ready for continuous drainage.

## USING THE novita DEHUMIDIFIER

### Step 1

Remove all packaging materials from the unit.

NOTE: DO NOT remove the polystyrene from the water tank.

### Step 2

Place the unit on a dry, stable and level surface.

### Step 3

Ensure that there is clearance of at least 10cm from walls or curtains for the back and clearance of at least 50cm for the front of the unit.

NOTE: DO NOT block the air inlet and outlet to ensure sufficient air ventilation and maximum efficiency of the unit.


Step 4: Connect the power plug to the power supply and power on.

Step 5: Turn on the unit by pressing the power control.

Step 6: Select your preferred humidity setting with the   button.

## Emptying the water tank

**novita** Dehumidifier ND 690 shuts off automatically when the water tank is full. Follow the simple steps below to empty the water tank.

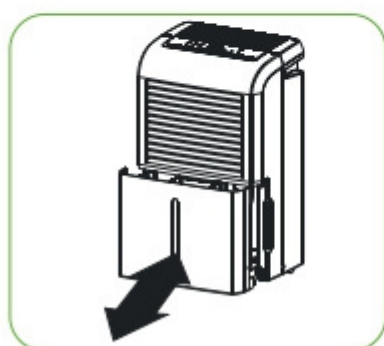

### Step 1

Remove the water tank from the unit.



### Step 2

Hold the water tank by its handle and proceed to empty the contents before placing the water tank back to the unit.

## CLEANING & MAINTENANCE

### Cleaning the novita Dehumidifier ND 690

To ensure the effectiveness of the dehumidifier, it is recommended to clean and maintain the unit at least once a week.

- 1) Disconnect the dehumidifier from the power supply.
- 2) Use a soft cloth to gently wipe the outer case to remove dust.
- 3) Remove stubborn stains with a mild household cleaner.


NOTE: DO NOT spray water directly on to the unit.

### Cleaning the Nylon Mesh Pre-Filter Screen




Nylon Mesh Pre-Filter Screen

The pre-filter screen can be removed from the designated slot at the front of the unit. It is recommended to clean it once every two (2) weeks.

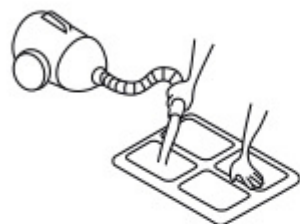


- 1) Remove the pre-filter screen from the unit.
  - 2) Use a vacuum cleaner OR a brush to remove the lint collected.
  - 3) Use warm soapy water to wash the pre-filter screen if required.
  - 4) Rinse and dry the pre-filter screen before placing it back into the unit.
- Note: DO NOT use the dehumidifier without the pre-filter screen in place.

## SAFETY PRECAUTIONS

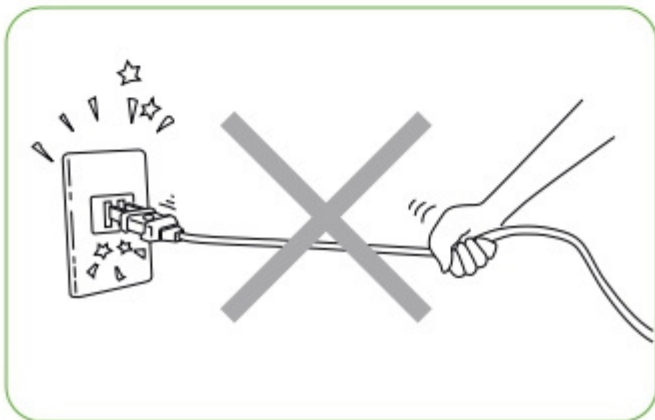


DO NOT pull or tug the unit by the power cord to prevent safety hazards or damage to the unit.

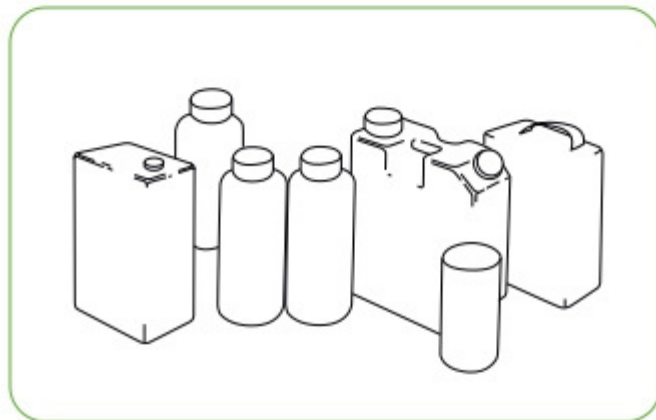


Keep the unit away from flammable liquids.




7 Servicing should only be conducted by professional service technicians.

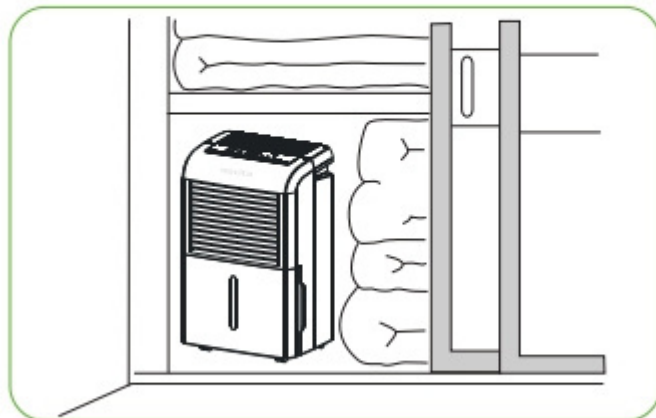

Refrain from placing the dehumidifier in confined closets.

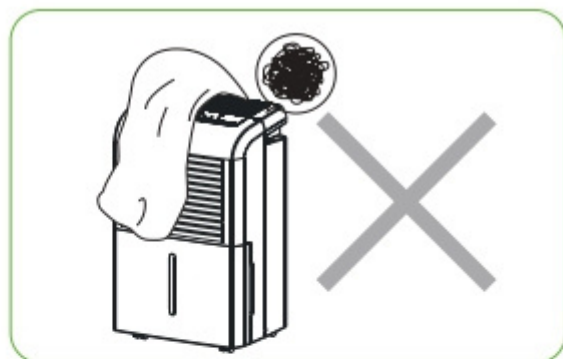


DO NOT block the air inlet and outlet when the unit is operating and DO NOT drape any garments or fabrics on top of the unit for drying purposes.

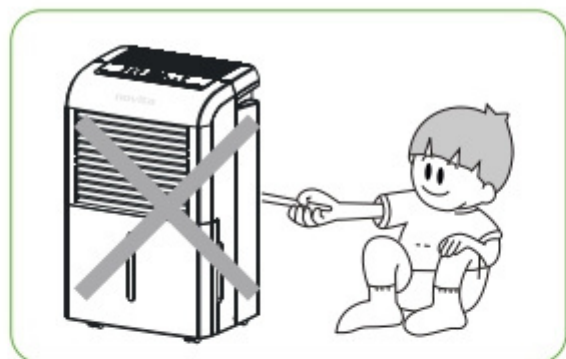


DO NOT insert any foreign objects into any crevices of the unit.




Keep the unit away from direct sunlight or any heat source.

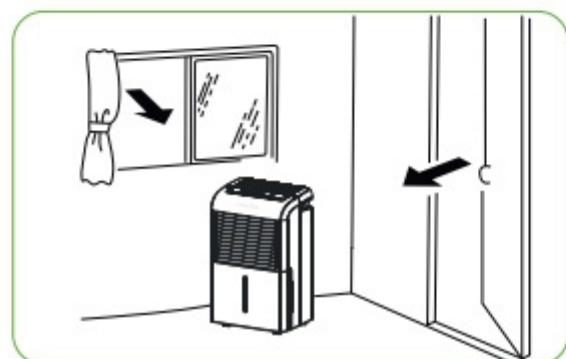


To ensure maximum efficiency, ensure that the dehumidifier is placed in an enclosed area with windows and doors firmly shut.

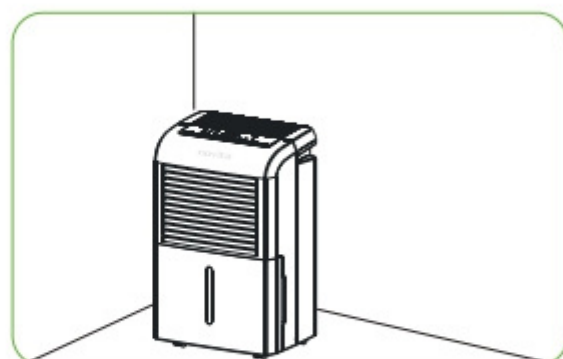


Allow adequate clearance and space around the unit for air ventilation.

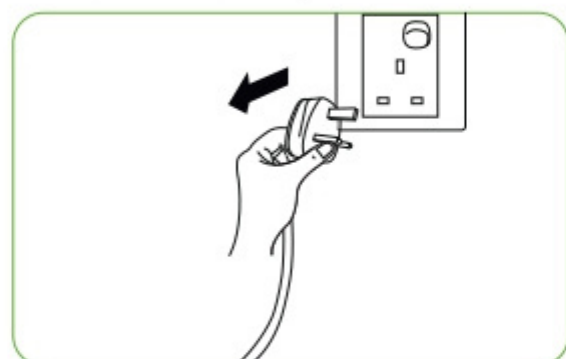

Always disconnect the unit from the power supply during transportation, maintenance or cleaning.

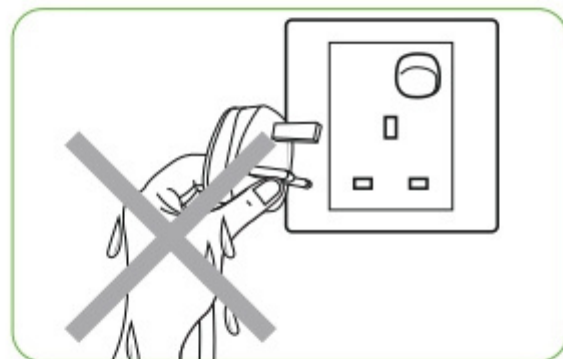

DO NOT handle the unit or the power cord with wet hands.

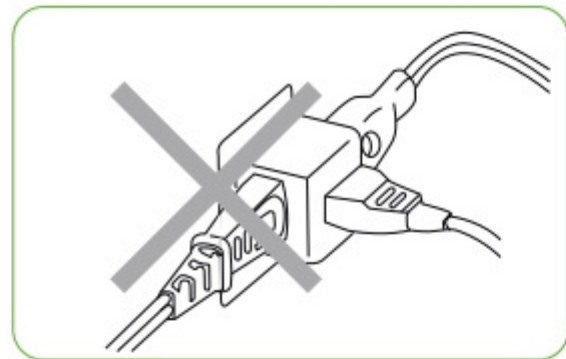

Refrain from overloading your power supply with multiple power plugs.



DO NOT move or incline the unit during operation.



DO NOT block the air inlet and outlet while the unit is operating.



## SAFETY INSTRUCTIONS

- 1) Read the operating instructions carefully before using the dehumidifier and keep it for later reference.
- 2) Persons who are not familiar with the operating instructions, as well as children and persons under the influence of medication, alcohol or drugs are not advised to operate the dehumidifier, or are only advised to operate it under supervision.
- 3) DO NOT use the dehumidifier if there is any damage to the unit or power cord.
- 4) Only operate the unit when it is completely assembled and on a stable surface. Placing the unit on uneven surfaces can result in water leakages or additional noise.
- 5) DO NOT handle the unit with wet hands.
- 6) Always use the correct power supply.
- 7) DO NOT insert any foreign objects into any crevices of the unit.
- 8) Keep the unit away from direct sunlight or heat sources.
- 9) Disconnect the dehumidifier from the power supply:
  - When emptying the water tank
  - Before cleaning
  - During assembly or dismantling the unit
  - Before moving the unit
- 10) Repairs of appliance should only be done by qualified service technicians. Improper repair work can cause considerable danger to the user.

## TROUBLESHOOTING

CONDITION	POSSIBLE CAUSE	POSSIBLE SOLUTION
Unit cannot be switched on	Water tank not placed correctly	Remove water tank and replace it into the unit again
	Power Plug or cord damaged	Contact <b>novita</b> Customer Service Centre
Fan not working	Motor has broken down	Contact <b>novita</b> Customer Service Centre
Compressor not working	Compressor failure	Contact <b>novita</b> Customer Service Centre
Poor performance or not dehumidifying at optimum capacity	Pre-filter screen is dirty	Clean the pre-filter screen
	Low temperature	Dehumidifiers do not work as effectively in low temperatures
	Low relative humidity (RH) levels	Effectiveness of dehumidifier increases as RH increases
Excessive noise	Unit is placed on uneven surface	Move unit to a level and stable surface
	Loose or foreign particles inside the unit	Contact <b>novita</b> Customer Service Centre
	Motor or compressor is loose	Contact <b>novita</b> Customer Service Centre
	Sound of flowing water	This is normal
Water in tank overflows	Water tank is damaged	Replace the water tank
	Float for water auto-sensor is not in place	Replace or adjust the float
	Internal drainage passage is blocked or obstructed	Contact <b>novita</b> Customer Service Centre