#### Getting Started:

 $\oplus$ 

- Remove the product from the box.
- Please retain all packaging after you have checked and counted all the parts and the contents against the Package Contents list.

#### Package Contents

- True Wireless Stereo Earbuds
- Charging Case
- Extra Earbuds (Small, Medium, Large)
- USB Charging Cable
- Instruction Manual

#### Features:

- HD Sound Premium quality membrane drivers that produce high quality sound with heavy bass.
- Long Battery Life 5 hours playback time on a single charge and a total of 20 hours with the charging case.
- High Definition Mic In-built HD microphone that supports high quality calls.
- Built-in controls for calls, music and voice assistant
- Auto Turn On/Off Auto Turn On/Off features allows connecting and disconnecting the earbuds when placed or removed from the case.

#### Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not use the unit if it has been dropped or damaged in any way. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a to

Do not use the headset at excessive volume levels, as damage to hearing may occur.

#### Description of P



1 Charging Case Button-Press the button to know the status of the battery in the charging case. If the light turns steady blue it means the charging case has sufficient power. If the blue light flashes slowly, it means the battery is low. When there is no battery power, the light will be off.

	LED Indicator
	Charging Port
	Charging Connectors
5	Built-in Microphone
6	MF (Multi-Function) Button
7	Earbuds LED Indicator

# ISTRUCTIONS FOR USE:

The Charging Case and Bluetooth Earbuds come with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Please recharge the battery to following other methods every time they design out

#### To charge the Charging Case (without Bluetooth Earbuds):

Plug the Micro USB end of the included USB charging cable into the charging port of the Charging Case. Plug the other end into a suitable USB port such as the one on your computer or other devices made for USB charging. The LED indicator flashes red to indicate that its being charged. It takes about 2 hours for the case to charge fully. When the battery is fully charged, the red LED light will stay on.

#### charge the Bluetooth Earbuds:

- 1. After fully recharging the Charging Case, disconnect it from charging.
- 2. Put the Bluetooth Earbuds into respective charging slots ` correctly, and close the Charging Case.
- 3. The LED indicator on the Charging Case turns blue to indicate that the battery of the Earbuds is being charged. It takes about 2 hours for the Earbuds to fully charge. When the battery is fully charged, the blue LED indicator light on the Charging Case will turn off.

#### Turning on/off the Bluetooth Earbuds

Take out the Earbud from the Charging Case, it will turn on automatically (Or, if the Earbud is not stored inside the Charging Case, press and hold the MF button of the Earbud for 3 seconds to turn ON.)

Press and hold the MF button of the Earbud for 3 seconds to turn OFF the device. (Or, put the Earbud back to the Charging Case, it will turn off for recharging automatically.)

# Pairing both Bluetooth Earbuds with Bluetooth devices (phone or tablet that support call-answering):

- Take out both Earbuds from the Charging Case, it will turn on automatically and the LED flashes red and blue (\*Or, if both Earbuds are not stored inside the Charging Case, press and hold the MF button of the Earbuds for 3 seconds to turn ON. An indication tone will be heard and the LED flashes red and blue.)
- After few seconds, you would hear another indication tone when both Earbuds connected together. The LED light indicator on the right Earbud will flash red and blue, and the LED light indicator on the left Earbud will flash blue slowly.
   At this point, activate the Bluetooth function on your mobile
- device, and search for Bluetooth devices near you.
- Once you have activated Bluetooth on your mobile device, select the "SL TrueBeats Pro" from the list of available Bluetooth devices.

• Once paired successfully, an indication tone will be heard and the LED on both units will flash blue slowly.

# Making a call with the Bluetooth Earbuds in Stereo pairing mode Basic operation:

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the MF button of one Earbud to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the MF button of one Earbud for 1.5 second and release
End call	Incoming Call	After your phone conversation, short press the MF button of one Earbud
Redial last number	Standby mode and connected to a device	Short press the MF button of the right Earbud 3 times quickly

**lote:** both Earbuds support phone conversatio

### Listening to Music Wirelessly in Stereo pairing mode:

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbuds to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button of one Earbud will pause the music
Play	Pausing	Short press the MF button of one Earbud will resume the music
Previous Track	Playing music	Short press the MF button of the left Earbud twice
Next Track	Playing music	Short press the MF button of the right Earbud twice

**Note:** Other functions including volume increase/decrease, you may need to control through your source device.

# Pairing either one Bluetooth Earbud with Bluetooth device (phone or tablet that support call-answering):

• Take out one Earbud from the Charging Case, it will turn on automatically and the LED flashes red and blue (Or, if the Earbud is not stored inside the Charging Case, press and

las nu

 $\oplus$ 

hold the MF button of the Earbud for 3 seconds to turn ON. An indication tone will be heard and the LED flashes red and blue.]
Place the Bluetooth Earbud and Bluetooth device (phone or tablet that support call answering) no further than 1m apart from each other;

- Activate the Bluetooth function on your mobile device. Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your mobile device, select the "SL TrueBeats Pro" from the list of available Bluetooth devices.
- If required, enter the password '0000' to confirm & finalize pairing.
  - ce paired successfully, another indication tone will be ard and the LED will flash blue slowly.
  - I can now start to use the Earbud.
- If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.
- Once you have paired the Bluetooth Earbud with a mobile device, the Earbud will remember this mobile device and will pair automatically when its Bluetooth is activated within the range, during subsequently pairing. You do not need to re-pair any previously connected devices.
  - Bluetooth Earbud will attempt to automatically connect to last device it was paired with when switched on. If you nt to pair it with a new device, please follow the steps lined above.

# ng a call with the Bluetooth Earbud in Bluetooth mode : operation:

wer Incoming Short press the MF button to answer an incoming call. ect Incoming Press and hold the MF button for ming Call 1.5 second and release call Incoming After your phone conversation, Call Short press the MF button 3 times and connected quickly			
oming     Call     answer an incoming call.       ect     Incoming     Press and hold the MF button for       ming     Call     1.5 second and release       call     Incoming     After your phone conversation,       call     Standby mode     Short press the MF button 3 times	ction	Operation	Button
oming Call 1.5 second and release call Incoming After your phone conversation, Call short press the MF button fial Standby mode Short press the MF button 3 times and connected quickly	wer oming		
Call short press the MF button ial Standby mode Short press the MF button 3 times and connected quickly	ect oming l		
and connected quickly	l call		
	lial t nber	and connected	Short press the MF button 3 times quickly

# Listening to Music Wirelessly:

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbud to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button will pause the music
Play	Pausing	Short press the MF button will resume the music
Next Track	Playing music	Short press the MF button twice

**Note:** Other functions including volume increase/decrease, previous track, you may need to control through your source device.

# Voice Assistant Operation:

Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant, with short press the MF button of the left Earbud (when using both Earbuds) 3 times quickly.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

Note: Google Assistant is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device.  $\oplus$ 

SERVICE AND REPAIR: If the service is required for the product, the purchaser should contact Acetron Trade LLP Customer Service at support@acetron.in or by calling 1800 22 2468.

Disputes if any shall be subject to Mumbai Jurisdiction only

 $\oplus$ 

 $\oplus$ 

# TRUE BEATS PRO TRUE WIRELESS STEREO EARBUDS



12

While the Earbuds are paired using Bluetooth, short press the MF button of the left Earbud 3 times quickly and release to start conversation with your Siri or Google Assistant. An indication tone would be heard before you speak into the Earbud.

• Example 1: Short press the MF button of the left Earbud 3 times quickly and release, then speak into the Earbud(s), how's the weather today?

Voice Assistant will reply with something like: mainly cloudy with a few showers.

• Example 2: Short press the MF button of the left Earbud 3 times quickly and release, then speak into the Earbud(s), what's the time now?

Voice Assistant will reply with something like: it is 8pm now. • More examples:

Set an alarm for 7am tomorrow.

What's in the news?

# roubleshooting

Symptom	Solution
No Sound	<ul> <li>Power On the Earbud(s) and charge the battery</li> <li>Increase the volume on your mobile device and music source</li> <li>Move your mobile device closer to the Earbud(s) and away from any interference or obstructions</li> <li>Use a different music source</li> <li>Connect another mobile device</li> </ul>
Poor Sound Quality	<ul> <li>Use a different music source</li> <li>Connect another mobile device</li> <li>Move your mobile device closer to the Earbud(s) and away from any interference or obstructions</li> </ul>
Battery Won't Charge	<ul> <li>Secure the ends of the USB charging cable</li> <li>Try another charging source</li> </ul>

 

 Assistant not
 Devices

 responding
 Make sure Google Assistant is downloaded on your mobile device and set to default voice assistant

 Make sure your Android Mobile Device is Bluetooth paired with Earbud

 Make sure your android Mobile Device is Bluetooth paired with Earbud

 Make sure your android Mobile Device is Bluetooth paired with Earbud

 Make sure you are in a country where Google Assistant is available

 For additional support, visit www.support.google.com/assistant

 Loud Dial Tone Noise When Activating Google Assistant App

 On your Android mobile device, go to Settings > Apps > Google App > Disable. After that, tap Enable [If you have uninstall the Apo].

• This is only available for Android Mobile

### are and Maintenance:

Your Gooale

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

 Don't expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.

Don't use abrasive cleaning solvents to clean the device.

 Don't expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Don't dispose of the device in a fire as it will result in an explosion
 Don't expose the device to contact with sharp objects as this will

cause scratches and damage.

• Don't let the device fall on the floor. The internal circuit might get damaged.

 Don't attempt to disassemble the device as it may get damaged i you are not professional.

9

#### Specifications

luetooth Decification	Bluetooth 5.0
perating stance	10m
orking time	Up to 5 hours
harging put voltage	DC 5V
harging me	About 2 hours
oeakerPower ach Earbud)	3mW
uilt-In attery	Charging Case: 400mAh Bluetooth Earbud: 35mAh (each)
ze	Charging Case: 60mm (L) x 23.8mm (D) x 52mm (H) Bluetooth Earbud: 18mm (L) x 20mm (D) x 39mm (H) (each)
eight	Charging Case: 38g Bluetooth Earbud: 4g (each)

**Note:** Battery life & charging time may vary based on usage & types of devices used.)

# Limited Warranty:

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All the materials and workmanship are warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of the defects in material or workmanship. This warranty is effective only if the product is purchased and operated in INDIA, and does not extend to any units which

10

have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with sale of our products.

WARRANTY PERFORMANCE: During the above one (1) year warranty period, a product with defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the warranty period or thirty (30) days which ever is longer.

RANTY LIMIT: The maximum liability of the company shall xceed the actual purchase price paid by the purchaser.



Instruction Manual Please read all instructions carefully and retain for future use.