


**SB-X30**  
**INSTRUCTION MANUAL**

**aiwa®**

**Japan** est1951

# **HYPER BASS | IP67 WATERPROOF WIRELESS TWS SPEAKER**

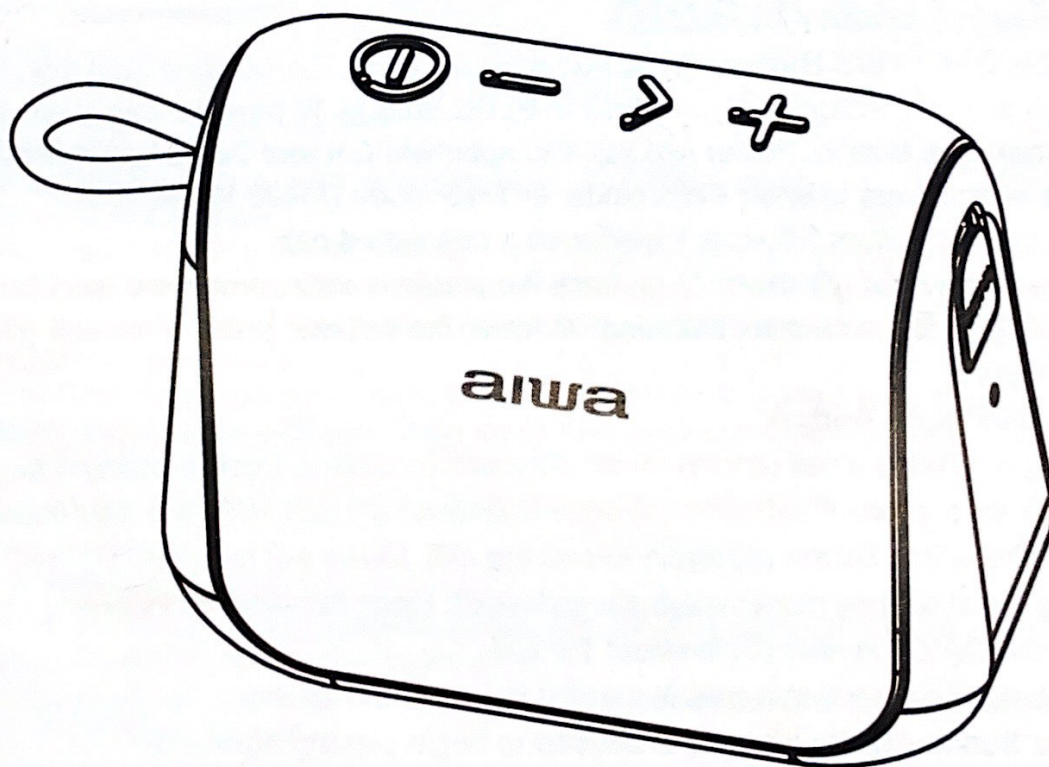


 **Bluetooth®** v5.0

**AUTHENTIC PRODUCT**  
**AIWA CO., LTD.**  
**TOKYO, JAPAN**



# INSTRUCTIONS

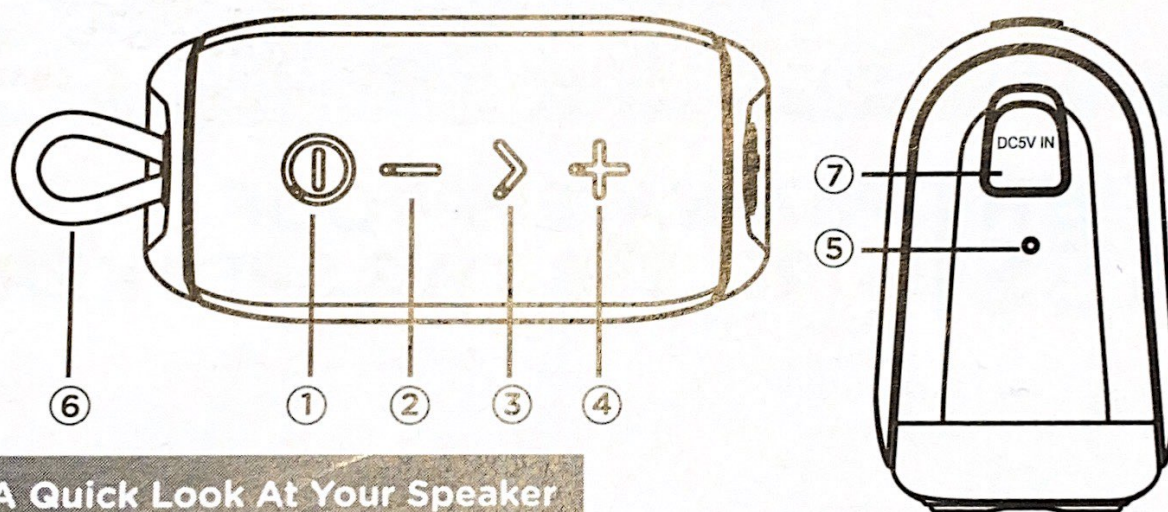

## A Quick Look At Your Speaker

**1. Power ON/OFF / TWS Button:** To power on your speaker, press and hold this Button, then the LED indicator (5) will flash in BLUE quickly. To power off your speaker. Press and hold this Button. Power two SB-X30 speakers ON and then press this button on any one of speakers to enter TWS mode. In TWS mode (TRUE WIRELESS STEREO), both speakers will work together as a connected pair.

**2. Previous song / Vol - Button:** To go back the previous track, press and hold (long press) this Button for more than 1 second. To lower the volume, press & release (short press) this Button.

**3. Play/Pause/Phone Button:**

A) Accepting or ending a call (during music playback included): Upon hearing the incoming call tone, press this Button (3) once to answer the call. This will also pause your music. Press this Button (3) again to end the call. Music will resume.

B) Rejecting a call (during music playback included): Upon hearing the incoming call tone, press the *On/Off Button* (1) to reject the call.

C) Press this Button (3) when music is playing to pause the music.

D) Press this Button (3) when music is paused to begin playing again.

**4. Next song / Vol + Button:** To skip to the next track, press and hold (long press) this Button (4) . To raise the volume, press & release (short press) this Button (4).

**5. LED Indicator Light**

**6. Fabric Lanyard Loop (for use with the included carabiner buckle)**

**7. Micro USB charging port:** Use the included USB charging cable to charge your speaker.



## Charging Your Speaker

1. Connect one end of the included Micro USB Charging Cable to the Charging Port on your speaker. Then plug the other end of the USB Charging Cable into a suitable USB port on your computer, notebook or power bank to recharge your speaker's internal rechargeable battery.
2. When charging, a red LED light will illuminate to indicate that the unit is charging. The red light will turn off when your unit is fully charged.

## BT Pairing

1. Turn on your mobile device and go to the Bluetooth menu in Settings.
2. Make sure the speaker is within three meters (Appx. 10 feet) from the mobile device.
3. Press and hold the On/Off Button (for about 5 seconds) on your speaker to power on. The LED light will blink blue to indicate that you have entered pairing mode.
4. Select 'AIWA SB-X30' in the Bluetooth device list. Ensure that the device shows 'Connected' in the status display. (If a PIN is required, enter 0000.)
5. This procedure is required only the first time you pair the speaker with your mobile device. The speaker will automatically re-connect with your mobile device subsequently, each time you power it ON.
6. Press and hold (long press) the Play/Pause/Phone Button (3) on your speaker to re-enter Bluetooth pairing mode to pair with a different mobile device.

## TWS Mode

1. Make sure both speakers are not connected to any mobile device;
2. Power on both speakers;
3. Press "Power ON/Off" button (1) on any one of speakers, the two speakers will connect automatically with indicated tone. The Master speaker's LED will blink quickly and the other speaker's LED will stay lit constantly, it means both speakers are in TWS (True Wireless Stereo) Mode successfully.
4. While in TWS mode, use your mobile device to search for & connect to 'AIWA SB-X30' in the Bluetooth device list (in Settings). Once the speakers are connected, the blue LED of both units will be lit constantly.
5. Long press the "Power On/Off button" to disconnect (stop) the TWS mode.

## Reconnecting

1. If previously connected to a Bluetooth device, the 'SB-X30' will automatically reconnect with the same mobile device when powered on.
2. The speaker will not automatically reconnect to the mobile device if the distance exceeds three meters (Appx. 10 feet).

## Troubleshooting

1. **If the speaker does not turn on:**
  - A) Charge the speaker. If the speaker does not turn on even after charging, contact customer service at [www.aiwaindia.com](http://www.aiwaindia.com)
2. **If the speaker does not charge.**
  - A) Check whether the USB charging cable has been properly connected to the speaker and the power source.



- B) Check whether the PC power is on and that it is properly connected.  
C) When using a separately purchased USB power adaptor, make sure that it is suitable and properly connected (Suggested circuit: 1A).
- 3. If the speaker does not pair/connect:**  
A) Check whether the mobile device is powered on.  
B) Check whether Bluetooth is enabled on the mobile device.  
C) Check whether the mobile device is within 1 meter from the speaker.  
D) Check whether the mobile device is compatible with the speaker.
- 4. If Music will not play through the speaker.**  
A) Check whether the speaker and mobile device are powered on.  
B) Check whether the music is playing on your mobile device.  
C) Check the volume level on your mobile device.
- 5. Sound lag / distortion / noise.**  
A) Check if there is a 2.4 GHz device near your speaker or Bluetooth device.  
B) Check whether the mobile device is within 10 meters (30') of your speaker.
- 6. Caller cannot be heard.**  
A) Check whether the speaker is connected to the mobile device.  
B) Check whether Bluetooth is enabled on your mobile device.

## FEATURES & SPECIFICATIONS

Waterproof Rating: IP67 (Dust and Waterproof)  
TWS (True Wireless Stereo) function  
Built-In Mic for Phone-call HANDSFREE function  
Built-in Lithium Rechargeable Battery  
With Micro USB Charging Port  
Music Playback Time: up to 15 Hrs (fully charged)  
Audio Output Power: 5W R.M.S.  
Accessories:  
+ Carabiner Buckle for Secure Attachment  
+ Micro-USB Charging Cable

Bluetooth version: 5.0  
Loud speaker: 4Ω / 5W 45mm \*1  
Built-in battery: Li-ion 3.7v 1200mAh  
Speaker Dimensions: φ L97.8\*W47.4\*H81.5mm  
SNR: ≥80dB  
Bluetooth Frequency: 2.402-2.480 Ghz  
Wireless Transmission Distance: up to 10m  
Charging time : Approx. 2-3 hours  
Weight: 200g  
Charging: DC 5 V, 650mA (minimum)

## Important Safety Precautions

When using your Bluetooth Mobile Speaker, basic safety precautions should always be followed, including the following:

- Keep this product and its accessories away from excessive heat.
- Do not operate this device with a damaged cable or after it has malfunctioned or has been damaged in any manner.
- No sharp object should be subjected to the speaker/speaker-drivers as it may damage the speakers.
- Only use a soft cloth, no harsh abrasives or chemicals to clean, as it may damage the surface finishing.
- Ensure the speaker is waterproof by removing all the connected cables and the cap is tightly closed before exposing the speaker to liquid.
- Do not expose the speaker to water while charging, as doing so may result in damage to the speaker or the power source.