

Dear Customer,

Congratulations!

Welcome to the wonderful Prestige family! Thank you for choosing Prestige Sandwich-Toaster.

The Prestige Sandwich-Toaster has been carefully manufactured, tested and packaged so as to give you trouble-free performance.

After all, it is from Prestige – a trusted name in kitchenware for generations in India with customers countrywide.

We are sure your Prestige Sandwich-Toaster will add a touch of class and convenience to your kitchen!

Your Prestige Sandwich-Toaster comes with a one year warranty. Please ensure that you post / mail your Customer Response Card within 7 days from the date of purchase to enable us to register your product.

Please read the instructions in the manual carefully, before use.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. Make sure that your mains voltage corresponds to the voltage stated on the specification sticker of the Sandwich-Toaster.
3. Always unplug from mains socket when not in use and before cleaning.
4. Do not immerse appliance, cord or plug in water or any other liquid.
5. Do not operate the Sandwich-Toaster with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the nearest Regional Service Centre/Authorised Service Centre.
6. Do not use any additional accessories that are not recommended by the company. It may result in fire, electric shock and/or personal injury.
7. Do not let the cord hang over edge of table or counter, or touch any hot surface.
8. To disconnect, remove plug from the wall outlet. Always hold the plug. Never pull the cord.

9. Do not use the appliance for uses other than its intended use and always place it in a dry area.
10. Do not leave the Sandwich-Toaster unattended while it is in operation.
11. Do not touch any hot surface. Use handle only.
12. Always place the appliance on a table or flat surface when operating.
13. There are no parts in your Sandwich-Toaster that are serviceable by the user. Unauthorized dismantling or servicing will void the product warranty.
14. Oversize foods, metal foil packages or utensils must not be inserted in the Sandwich-Toaster as they may cause fire or electric shock.
15. Do not attempt to dislodge the bread slice when Sandwich-Toaster is in operation.
16. Sandwich-Toaster must not be used near or below curtains and other combustible materials. Close supervision is necessary when children are around.
17. The appliance should be strictly used for domestic purposes only.


SAVE THESE INSTRUCTIONS

KNOW YOUR PRESTIGE SANDWICH TOASTER

Model : PCMFS

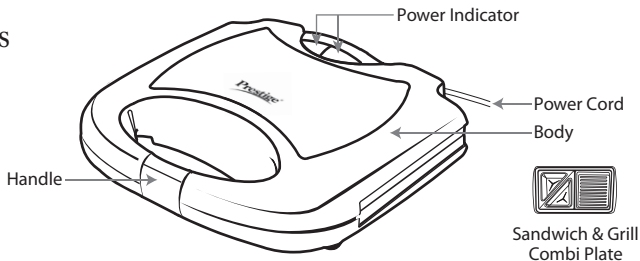


Model : PGMFB

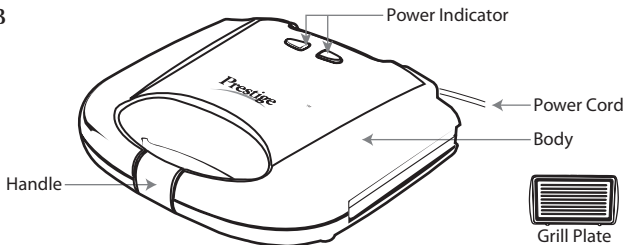 


KNOW YOUR PRESTIGE SANDWICH TOASTER

 Model : PSMFB

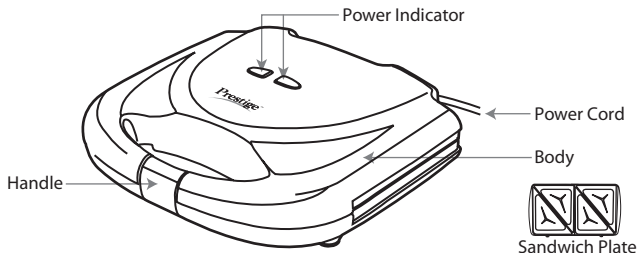


Model : PSMCB

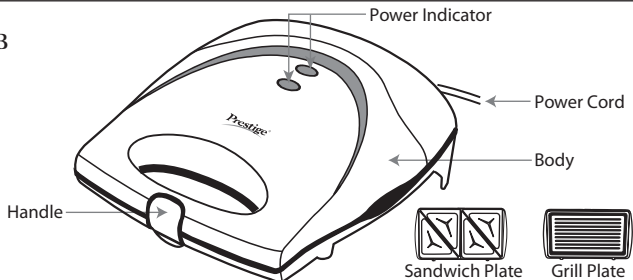 


KNOW YOUR PRESTIGE SANDWICH TOASTER

 Model : PSMCS

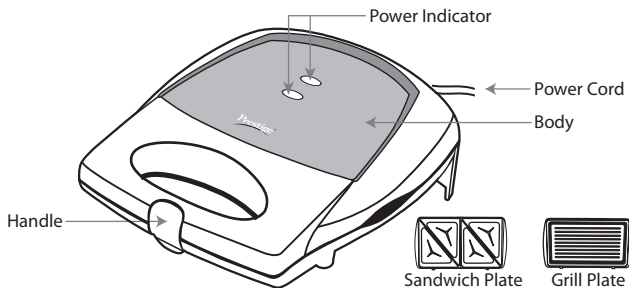


KNOW YOUR PRESTIGE SANDWICH TOASTER

 Model : PGSFB

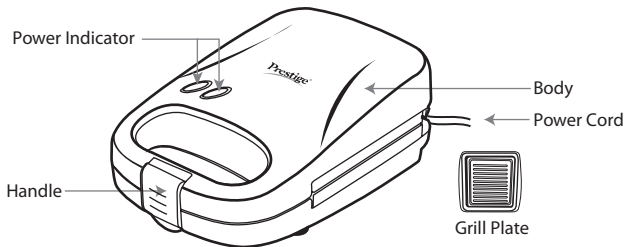

Model : PSSFB

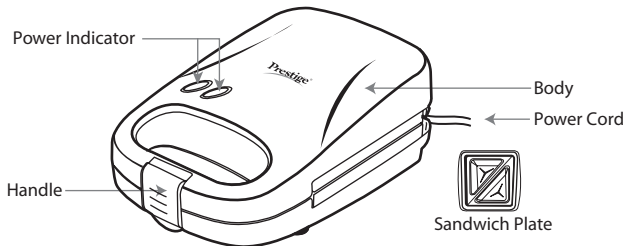 

HOW TO USE YOUR PRESTIGE SANDWICH-MAKER

Note :The model PCMFS can be used to make Toasted/Grilled Sandwiches simultaneously.

1. Plug the power cord into the mains socket. The red lamp will be lit.
2. Before inserting the bread slice in to the Sandwich-Toaster, please preheat the appliance until the green (ready) light is on. When the green light is on this means that the temperature has reached the pre-determined set temperature level. Usually it takes a few minutes.
3. Take two bread slices and add the desired filling between the slices. Always add the filling to ensure optimum toasting.
4. The bread slices must be coated with butter on the sides which will be in contact with the inner lower plate and the upper plate of the toaster.
5. After pre-heat, open the sandwich toaster and place the bread slices with the filling between the inner lower plate and the upper plate of the toaster so that the buttered sides are in contact with these plates.
6. Close the Sandwich-Toaster slowly by pressing gently and make sure that it is closed properly and clipped.
7. The green light will turn off after few seconds.

8. The green light will glow once again after the toasting is over.
9. Open the Sandwich-Toaster and take out the sandwich. If you prefer this to be more toasted close the Sandwich-Toaster once again then let the sandwich toast further.
10. The Sandwich-Toaster can also be stopped at any time by unplugging the power cord out of the power outlet.

Caution:

1. It is difficult to close the toaster if the filling is too much. Do not try to close the Sandwich-Toaster by pressing it too hard. Instead, reduce the filling in your Sandwich-Toaster or make sure that the bread slices are fully covered by the Sandwich-Toaster plates and they do not exceed the periphery of the plates. Otherwise, you may cause damage to the appliance and to the non-stick coating of the plates as well.
2. When you take the bread out of the Sandwich-Toaster, do not use sharp instruments (like metal knife, fork etc.). You should always use a heat resistant plastic or wooden spatula to prevent damage to the non-stick coating.

CLEANING AND MAINTENANCE

1. Disconnect the appliance from the mains outlet.
2. Let the appliance to completely cool down before you proceed.
3. Do Not immerse the sandwich toaster in water or clean the appliance in running water.
4. Wipe the exterior surface with a soft, dry cloth. Never use scouring pads.
5. If your Sandwich-Toaster is used frequently, accumulated bread crumbs should be removed regularly or at least once a week. Make sure that any possible food leftovers or crumbs are completely removed before using the Sandwich-Toaster again.
6. Never attempt to remove loaves that have jammed in the plates without unplugging the Sandwich-Toaster from the mains. Please take extra care to avoid possible damage to the non-stick coating of the plates when removing bread loaves/slices.
7. Clean the interior non stick surface with a soft damp cloth and then wipe it thoroughly with dry cloth.

TECHNICAL SPECIFICATIONS

| MODEL | WATTAGE | VOLTAGE |
|-------|---------|------------|
| PCMFS | 800W | 230V 50 Hz |
| PGMFB | 800W | 230V 50 Hz |
| PSMFB | 800W | 230V 50 Hz |
| PSMCB | 800W | 230V 50 Hz |
| PSMCS | 800W | 230V 50 Hz |
| PGSFB | 500W | 230V 50 Hz |
| PSSFB | 500W | 230V 50 Hz |

WARRANTY CARD (CUSTOMER'S COPY)

This page has to be treated as a full fledged warranty card and is required to be maintained by you. You will be required to produce this while claiming the service within the warranty period. In the unlikely event that a defect should develop in the Sandwich Toaster during the period of this warranty, the product should be delivered at your cost to the Regional Service Centre/branches or Authorised Service Centre along with this warranty card.

Date of purchase Serial No:

Prestige Sandwich Maker: PCMFS ☐ PGMFB ☐ PSMFB ☐ PSMCB ☐
PSMCS ☐ PGSFB ☐ PSSFB ☐

Name: _____

Address: _____

Dealer's Stamp & Address

TERMS OF WARRANTY

Prestige {hereinafter referred to as the Company} warrants to the purchaser of “Prestige Sandwich-Toaster”, {hereinafter referred to as Prestige Sandwich-Toaster} that the said Prestige Sandwich-Toaster is free from all defects in material and workmanship. This warranty is valid for a period of one year from the date of original purchase, subject to the following terms and conditions:-

- 1) The warranty card is to be completed, signed by the dealer immediately on purchase.
- 2) The Prestige Sandwich-Toaster is only to be serviced by the Company Regional Service Centre or by its Authorised Service Centre (addresses listed in this manual).
- 3) The customer shall carry the Prestige Sandwich-Toaster to the nearest Company Regional Service Centre/Authorised Service Centre at his/her own cost and risk.
- 4) The Company shall make all endeavours/attempts to carry out the Service/Replacement under this Warranty at the earliest, but shall not be liable to do so within any specified time.
- 5) The Warranty will continue and remain in force only for the unexpired period of the original Warranty, in regard to the Repair/Replacement of parts of the Prestige Sandwich-Toaster.

- 6) The Prestige Sandwich-Toaster shall be used strictly for domestic purposes in accordance with the user's manual.
- 7) The Company shall not be held liable for any accident, loss or damage (direct or indirect) to person or property caused by reason of:
 - a) Repairs/Service attended by unauthorised service person.
 - b) Over-loading/Misuse/abuse or/and negligence on the part of the person.
 - c) Defects caused by improper/reckless use.
 - d) Use of spurious spares/old, non-genuine spares.
 - e) Failure to comply with any safety precaution or maintenance tip suggested by the Company.
 - f) Original serial number is deleted/defaced or altered.
- 8) The Company shall not be responsible for any special consequential damages or loss arising directly or indirectly for any delay in the performance of this Warranty.
- 9) The Company reserves the right to retain any part or component at the Regional Service Centre/branches or Authorised Service Centre or at its workshop and shall effect Repairs/Replacement or parts or components at its sole discretion.
- 10) This Warranty shall not in any case extend towards payment or any monetary consideration whatsoever, and shall be only limited to the product replacement.

- 11) Electrical parts are not covered under the warranty terms as they are subject to wear and tear. Replacement of these parts is chargeable.
- 12) Electrical appliances, wire points need regular check up by an authorised service person.
- 13) Electrical appliances are prone to voltage fluctuation risks, therefore precaution should be taken before use. Company shall not be responsible for any damage to electrical parts, arising out of this problem.
- 14) For repairs after the expiry of the warranty period, the authorised service centre will levy a charge (based on the MRP) for the component replaced.
- 15) The decision of the company is final in all cases of complaints.
- 16) Any complaints/disputes shall be within the jurisdiction of the Courts of Bangalore.

REGIONAL SERVICE CENTRES

| SOUTH ZONE | WEST ZONE | NORTH ZONE | EAST ZONE |
|--|---|---|---|
| <p>TTK Prestige Limited Old No. 17-A, New 18, Baliah Avenue (behind bank of India) Mylapore, CHENNAI-600 004. Ph: 044-42074351, 42312535</p> <p>TTK Prestige Limited K S R Building, Plot No.8,9,10, Ramamurthy Nagar, Next to Laxmi Service Station, Chintamani, Karur Bye Pass Road, TRICHY-2. Ph:0431-270 1384</p> <p>TTK Prestige Limited VRK Chambers, 198 & 198/1, 4th Cross, Lalbagh Road, BANGALORE - 560 027. Ph: 080-2229 6922 / 22106673</p> <p>TTK Prestige Limited XXXV /1953, 1954, Mareena, Bldg., M.G. Road, Ravipuram, Ernakulam, COCHIN : 682 016. Ph: 0484-2359422 / 2359189</p> <p>TTK Prestige Limited 3-6-751, Sai Sadan, Street No.12, Beside Autofin showroom, Himayath Nagar, HYDERABAD-500 012. Ph: 040-27601649</p> <p>TTK Prestige Limited 69-1-1, Patamata, VIJAYAWADA - 520 010. Ph:0866-247 6237 / 247 5965</p> | <p>TTK Prestige Limited G-Wing Ground Floor, Tex Centre, Narayan Properties, Chandivli Road, Andheri East, MUMBAI - 400 072. Ph: 022- 28571762 / 28472005</p> <p>TTK Prestige Limited Survey No 515/516, Shop No 9/10, Sadashiv Peth, Purva Plaza, Near Dyan Prabodhini, PUNE - 411 030. Ph : 020-24472710.</p> <p>TTK Prestige Limited C/o. Abishek Enterprises, 339, Shivaji Nagar, INDORE - 452 003. Ph : 0731-2537538</p> <p>TTK Prestige Limited 807, 'Mahakant' Opp. V.S Hospital, Ellis Bridge, Ashram Road, AHMEDABAD - 380 001. Ph: 079 -26575241 / 26575949</p> | <p>TTK Prestige Limited No.36, DLF Industrial Area, Kirti Nagar, (Opp. Fun Cinema), NEW DELHI - 110015. Ph: 011 - 25103163/25442411</p> <p>TTK Prestige Limited C/o Zurich India, D - 11, Meerut Road Industrial Area, GHAZIABAD U.P., Ph : 0120 - 4164470</p> <p>TTK Prestige Limited Plot No. 186, Industrial Area, Phase - II, Chandigarh (UT) Ph: 0172-5075584</p> <p>TTK Prestige limited B -2, Status Enclave, D-241, Devi Marg, Bani Park, JAIPUR - 302002, Ph: 0141 - 2205997</p> | <p>TTK Prestige Limited 30, 1st Floor, Ganesh Chandra Avenue, KOLKATTA-700 013. Ph: 033-2215 3029</p> <p>TTK Prestige Limited C/o Ragini Enterprises, Plot No.124, Road No.22, Srikrishna Nagar, PATNA -800 001. Ph: 098352 38715</p> <p>TTK Prestige limited C/o Neelachal Agencies, Plot No.3195 'Anshumala' Professorepara, CUTTACK - 753 003. Ph: 0671 - 2326001</p> <p>TTK Prestige Limited C/o. Sadhana Warehousing, Agencies Pvt Ltd., G S Road, Rukmanigaon, Dispur, GUWAHATI - 781 022 Ph: 09207044688/09207410708</p> <p>TTK Prestige Limited C/o The Legend, Shop No.9,Jaiswal Complex, 508, Kashidih, Sakchi, JAMSHEDPUR-831 001. Ph: 09431077983</p> |