



## OVEN TOASTER GRILLER

OTGW 3760 RCSS

Instruction Manual

---



Dear Customer,

Congratulations!

You are now a proud owner of a USHA OVEN  
TOASTER GRILLER.

Innovatively designed, using only the highest  
quality material and components for years of  
trouble free performance.

Please read these instructions carefully before  
using.

Best Wishes



# CONTENTS

	<b>Operating Instructions:</b>
	Know the Control Panel ..... 10
	Cooking Modes and
	Accessory Usage ..... 11
	Placement of Accessories ..... 12
<b>Caring for You:</b>	
Important Safety Instructions ..... 4	
Safety Precautions ..... 6	
Save These Instructions ..... 6	
	<b>Clean / Maintain &amp; Product Specifications:</b>
	Tips on How to Use ..... 14
	Product Specifications
	& Technical Details ..... 15
	Maintenance & Cleaning ..... 16
<b>Before Use:</b>	
Know your OTGW ..... 7	
Unpacking and Installing ..... 9	<b>Warranty:</b> ..... 17

## CARING FOR YOU

### IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read all instructions before using your OTGW and follow the same to prevent the risk of fire, electric



#### **WARNING**

This symbol will alert you to hazards or unsafe practices which could cause serious body harm or death.



#### **CAUTION**

This symbol will alert you to hazards or unsafe practices which could cause body injury or property damage



#### **WARNING**

1. Do not tamper with, or make any modifications / repairs to the product. Repairs should only be undertaken by a qualified service technician.
2. Do not use the appliance for anything other than intended use.
3. Accessible parts and accessories become hot during use. Always use handles, tongs or knobs. Young children should be allowed to operate the product under supervision only.
4. Do not operate the product if it is damaged.
5. Do not immerse the cord, plug or any other parts of the OTGW in water or any other liquids.
6. Do not store any item on top of the appliance when in operation. A fire may occur if the oven is covered or on coming in contact with any flammable material, including curtains, draperies, wallpapers etc. when in operation.
7. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
8. Do not place or remove items from the OTGW without protective, insulated oven gloves.



## CAUTION

1. Do not operate the oven with the door open.
2. Do not overcook the food, as it may result in the food catching fire and subsequent damage to the OTGW. Ensure cooking times are correctly set, small amounts of food require short cooking or heating times.
3. Do not block the exhaust outlets on the sides and back side of the OTGW.
4. Do not cook food wrapped in paper towels, unless your cook book contains instructions for the food you are cooking.
5. Do not rinse the trays and others accessories by placing in water immediately after cooking. This may cause damage or breakage.
6. Be certain to place the OTGW such that the front of the door is 8cm or more behind the edge of the surface on which it is placed, to avoid accidental tipping.
7. If smoke is observed, switch off and disconnect the OTGW from the power supply and keep the oven door closed to stifle any flames.
8. To disconnect, turn the timer knob to OFF, then remove the plug. Always hold the plug, and never pull the cord.
9. Unplug from power outlet when product is not in use and before cleaning.
10. Extreme caution must be exercised when moving a drip pan containing hot oil or other hot liquids.
11. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
12. The oven should be cleaned regularly and any food deposits should be removed.
13. Do not clean inside of the oven with metal scouring pads, which can touch electrical parts, creating a risk of electric shock.
14. Do not use containers made of anything other than metal or oven proof glass.
15. Be sure that nothing touches the top or bottom elements of the oven during operation.
16. This appliance has safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Glass can still break around edges. Avoid scratching door surface or nicking edges.
17. This appliance is for HOUSEHOLD USE ONLY

## SAFETY PRECAUTIONS

1. Use exclusive 230V socket with earthing.
2. Do not bend power cord forcefully or break.
3. Do not plug in or pull out power cord with wet hands.
4. Do not use oven other than cooking or sterilization such as cloth drying etc.
5. Do not insert metal pins or wires through the vents or other openings in the oven body.
6. Do not plug in power cord when socket hole is loose or plug is damaged.
7. Do not place the water container on the set.
8. Do not place heavy things on the set and do not cover the set with cloth while using.
9. Do not install the set in the damp space or wet area.
10. Do not let children hang onto oven door.
11. Do not hold food or accessories as soon as cooking is over.
12. Plug out oven if it is not used for long duration.

### SAVE THESE INSTRUCTIONS

This appliance is intended for household use only.

(The appliance will not be covered under the manufacturer's warranty if the product is used for commercial purpose or in an unintended way)

All details with regard to the installation, operation and care are compiled to the best of our knowledge.

No claims can be derived from the information provided, the illustrations or descriptions in this manual.

- Save the instruction manual for future reference.
- If the appliance is given as a gift, please include the manual with the product.

 
The manufacturer does not assume any liability for damages arising as a result of the following:

- Non-observance of the manual
  - Uses for non-intended purposes
  - Improper repairs
  - Technical alterations, modifications of the device
  - Use of unauthorized spare parts
- Modifications of the product are not recommended and will void the warranty.

# KNOW YOUR OTGW

## IDENTIFICATION OF PARTS

### Main Unit

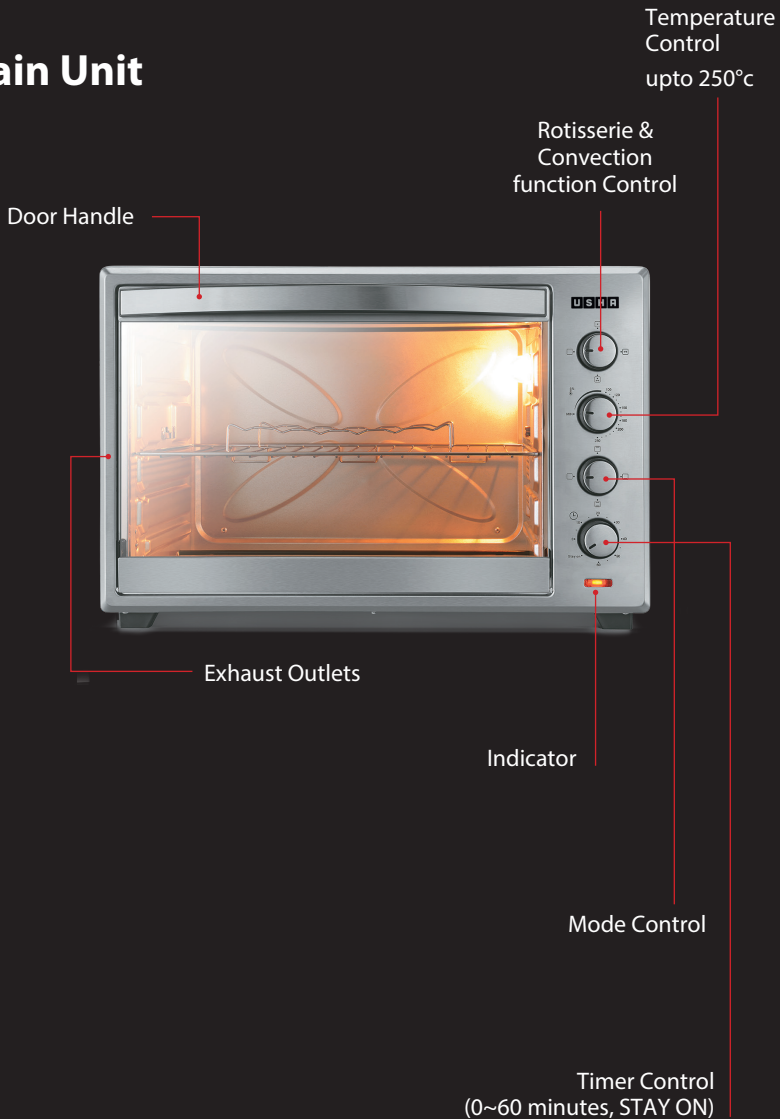

**Your OTGW comes with the following accessories:**

1. Crumb Tray
2. Baking Tray
3. Grill Rack
4. Rotisserie
5. Skewer Rods – 4 each
6. Rotisserie Tong
7. Grill & Bake Tray Tong
8. Rotisserie Skewers



Crumb Tray



Baking Tray



 
Grill Rack



Rotisserie




Skewer Rods

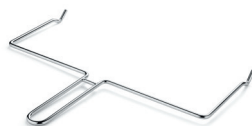

Rotisserie Tong



 Grill & Bake Tray Tong

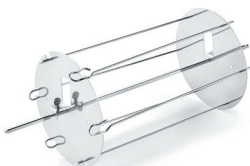

Rotisserie Skewers




## UNPACKING AND INSTALLING

 By following these basic steps you will be able to quickly check that your oven is operating correctly. Please pay particular attention to the guidelines on where to install the oven. When unpacking your oven make sure you remove all accessories and packing materials. Check to make sure that your oven has not been damaged during shipping.

1. Unpack your oven and place it on a flat, heat resistant and non-flammable surface.
2. Place the oven on the level location of your choice with more than 85 cm height but make sure there is at least 10 cm of space on the back and sides of the oven for proper ventilation. The front of the oven should be at least 8cm from the edge of the surface to prevent tipping. Blocking the exhaust outlets on the rear and two sides can damage the oven.

3. To remove any dust that may have accumulated on the removable parts during packaging, clean the surface with damp cloth. DO not immerse the oven in water or any other liquid.
4. Remove any stickers (except for any warning/caution stickers).
5. Plug the oven into a standard household socket. Make sure your oven is the only appliance connected to the socket.
6. Open your oven door by pulling the door handle. Place the crumb tray below the heating elements at the bottom side.
7. Before first use, heat the empty oven and leave the door open for at least ten minutes. This will burn off any excess lubricants found in the oven's heating elements and is not harmful. A little smoke may be normal and will disappear within few minutes.

## INSIDE OF YOUR OTGW

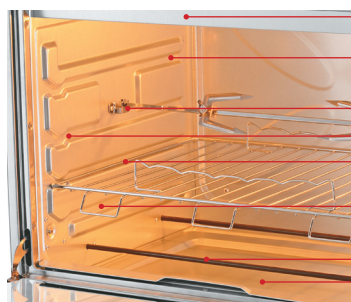

Top Heating Element

Rack position 4

Rotisserie Groove

Rack position 3

Rack position 2

 
Rack position 1

Bottom Heating Element

Crumb Tray



Illumination Lamp

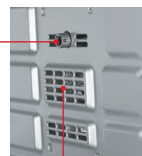

Convection Fan

# OPERATING INSTRUCTIONS

## KNOW THE CONTROL PANEL

### 1 ROTISSERIE AND CONVECTION FUNCTION CONTROL

Use this knob to choose between convection, rotisserie or rotisserie with convection function as per your requirement

### 2 TEMPERATURE CONTROL

Choose the desired temperature from 100°C to 250°C for baking or rotisserie function.

### 3 MODE CONTROL

This oven is equipped with four heating modes for a variety of cooking needs. Choose the desired heating mode as per your requirement



 
**GRILL / BROIL WITH CONVECTION**– Only the top heating element along with the convection fan is ON.

**BAKE** – Only the bottom heating element along with the convection fan is ON.

**TOAST** – Both top and bottom heating elements along with convection fan are ON.

**ROAST** – Both top and bottom heating elements, convection fan and rotisserie motor are ON.

**ROTISSERIE** – Select this mode to use rotisserie function

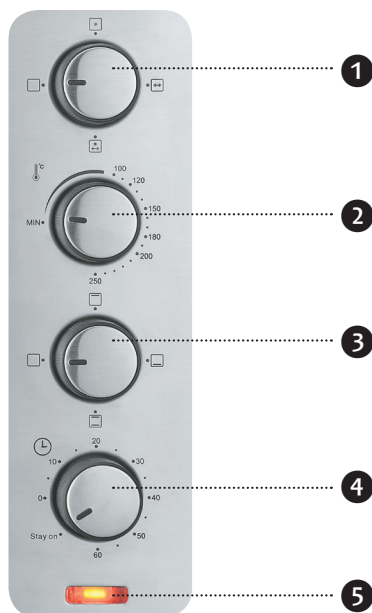

**KEEP WARM** – Your OTGW allows you to keep your food warm and fresh. Just set the desired temperature by rotating the temperature control knob and turn the Timer Control Knob to ON position.

#### 4 TIME CONTROL

The timer knob is used to set the time as per the requirement of the recipe.

To operate the timer, turn the knob to the right (clockwise) and set it to the required time. If cooking requires more than 60 minutes, the timer can be bypassed by using the STAY ON function. To bypass the timer, set the TIMER knob to ON position.

A bell rings when the programmed time is over.





#### 5 TIMER INDICATOR

The Red Indicator will remain illuminated until the set time is over.

#### \* ILLUMINATION FUNCTION

A light is provided inside the oven and will be on when the timer is set. This facilitates easy viewing of the cooking process inside the cooking chamber

COOKING MODES AND ACCESSORY USAGE

		ACCESSORIES						
MODE	FUNCTION KNOB	Crumb Tray	Baking Tray	Rotisserie / Rotisserie Skewers	Grill Rack	Skewer Rods	Rotisserie Tong	Grill & Bake Tray Tong
TOAST		✓			✓			✓
GRILL/ BROIL		✓			✓	✓		✓
BAKE		✓	✓					✓
ROAST		✓		✓			✓	

## PLACEMENT OF ACCESSORIES

1. Placing the Crumb Tray- Below the bottom heating element



2. Placing the Baking Tray-
  - a. Place in Slots 1 to 4
  - b. Use Tongs to place and remove



 
3. Placing the Grill Tray-
  - a. Place in Slots 1 to 4
  - b. Use Tongs to place and remove



4. Rotisserie Assembly and Placement-
  - a. Attach the holding pincers on the rotisserie



Slide the pincer on to the rotisserie rod

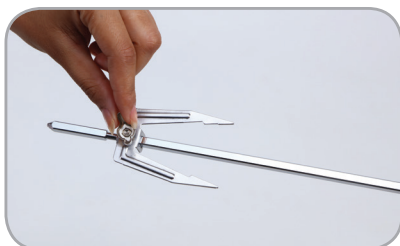

Tighten the screw to hold the pincer in place



## 5. Rotisserie Assembly and Placement-

### b. Placing the rotisserie in the motor slot:



Use the Rotisserie tong to hold the rotisserie, with the pointed end on the right side



Use the tong to place the rotisserie. First insert the pointed end in the right hand side motor groove, then place the Left side in the resting groove.

## 6. Placement of Skewers



 
Skewer the food and place the skewer rods on the skewer rack.



Slide the rack in place inside the oven.


**ROTISSERIE SKEWERS** – The Rotisserie Skewers are used to make paneer tikka, chicken tikka etc. There are 6 skewer rods provided with the accessory. The food is positioned on each of the skewer and the entire accessory is fixed in the rotisserie socket for delectable tikka.

**HOW TO ASSEMBLE** – Place food on the skewer rods. One by one insert pointed tip of each skewer inside the holes of indicated plate (Step 1a). Lock each of the skewer head as indicated on the second plate (Step 1b). Place the skewer assembly inside the OTG in the same way as you would place the rotisserie (Step 2).

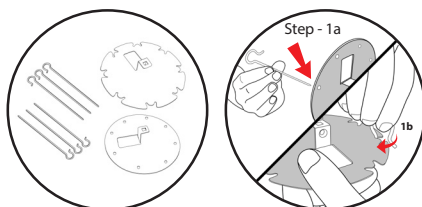

Parts of skewers

 Skewers Assembly

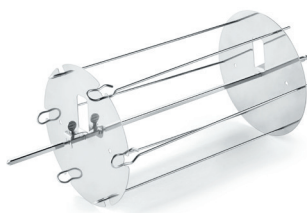

## TIPS ON HOW TO USE

### ROTISSERIE / ROTISSERIE SKEWERS

---

For best results, we recommend preheating the oven.

#### OPERATION

- Set the temperature control to desired temperature setting.
- Turn Function control to ROTISSERIE / ROAST position (as per requirement).
- Slide food through the rotisserie rod and fit the prongs on either side with the help of the screws provided in the prongs.
- Place one end of the rotisserie/rotisserie skewers in the groove provided on the sides of the chamber.
- Ensure that the food is centered on the rotisserie/rotisserie skewers.
- Place the other end of the rotisserie/rotisserie skewers on the opposite groove.
- For using the Rotisserie skewers, refer instructions mentioned in previous page
- Rotate the Timer to set required time.
- When cooking is complete, turn the timer to “OFF” position.
- A bell will ring at the end of the cooking cycle.
- Remove the rotisserie/rotisserie skewers by placing the hooks of the rotisserie tong under the grooves on either side of the rotisserie rod. Lift the left side of the rotisserie first by lifting it up and out. Then pull the rotisserie out of the drive socket and carefully remove it from the oven.

### GRILL/BROIL

---

For best results, we recommend preheating the oven for 15 minutes at 250°C.

#### OPERATION

- Set the temperature control to desired temperature setting.
- Turn Function control to GRILL/BROIL position.
- Slide the crumb tray into the lowest position.
- Place food on the wire rack and slide it into the top rack.
- Food should be placed as close as possible to the top heating element without it touching the element.
- Brush food with sauces or oil, as desired.
- Rotate the Timer to set required time.
- It is advisable to leave the door a little open.
- When cooking is complete, turn the timer to “OFF” position.
- A bell will ring at the end of the cooking cycle.

## TIPS ON HOW TO USE

### TOAST

Oven size allows you to toast larger quantities of food. If small amount is being toasted, place food on the wire rack in the center of the oven.

#### OPERATION

- Set the temperature control to desired temperature setting.
- Turn Function control to TOAST position.
- Slide the crumb tray into the lowest position.
- Place food to be toasted on the wire rack and slide it into the middle rack with the indentations pointing down.
- Rotate the Timer to set required time.
- Turn the food according to your need (light or dark).
- When cooking is complete, turn the timer to “OFF” position.
- A bell will ring at the end of the cooking cycle.

### BAKE

Bake your favourite cookies, cakes, pies, brownies etc. We do not recommend usage of oven roasting bags or glass containers in the oven. Never use plastic, cardboard or paper or anything similar in the oven.

#### OPERATION

- Place the wire rack in the lowest rack.
- Preheat the oven for almost 15 minutes.
- Place food to be baked on the wire rack.
- Turn the function control to BAKE position
- Turn the TIMER knob to ON position.
- A bell will ring at the end of the cooking cycle.
- When cooking is complete, turn the timer to “OFF” position.

## PRODUCT SPECIFICATIONS & TECHNICAL DETAILS

<b>Model No.</b>	<b>OTGW 3760 RCSS</b>
<b>Wattage</b>	2200 W
<b>Input Power</b>	230 V AC, 50Hz
<b>Capacity</b>	60 Litres
<b>Accessories</b>	Crumb tray, Baking tray, Grill rack, Rotisserie, Rotisserie Skewers, Skewers rods (4), Rotisserie tong, Grill & bake tray tong

Note: In view of USHA policy of continual development, specifications may change without notice. Images shown in the manual are for representation only.

## MAINTENANCE & CLEANING

### COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE

- Unplug the oven and allow it to cool completely before any cleaning or maintenance activity.
- Never allow water to spill on the tempered glass door when it is still warm.
- Ensure all acidic materials (lemon juice, oils etc.) are cleaned promptly.
- To clean interior walls, use a damp cloth and a mild liquid soap solution or a soapy solution on a sponge. Keep the oven door open to let it dry.
- Never use harsh abrasives or corrosive products to clean the interiors. It can damage the oven.
- Do not use abrasive cleaners for the exteriors, as they could leave scratches on the body. Simply wipe the exterior with clean cloth and dry thoroughly.
- Wire rack and baking tray are dishwasher safe. If heavily soiled, soak in warm soapy water or use a nylon scouring pad or nylon brush.
- Never wrap the power cord around the oven.

### What Is Not Covered:

- Service trips to your home to teach you how to use the product.
- If the product is connected to any voltage other than that shown on the rating plate.
- If the fault is caused by accident, neglect, misuse or Act of God.
- If the fault is caused by factors other than normal domestic use or use in accordance with the owner's manual.
- If the fault is caused by pests for example, rats or cockroaches, etc.
- Noise or vibration that is considered normal, for example spin sound, or warning beeps.
- Normal maintenance which is recommended by the owner's manual.
- Removal of foreign objects / substances from the machine: example, grit, moulds, food particles etc.
- Replace fuses in or correct house wiring.
- Correction of unauthorized repairs.
- Incidental or consequential damage to personal property caused by possible defects with this appliance.
- If this product is used for commercial purpose, it is not warranted.
- If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.



## WARRANTY CARD

This appliance is warranted for 2 years on product against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at 0Toll Free No. 1800 1033 111.

**The warranty is valid only when:**

1. The appliance has been installed, used and maintained in accordance with the instruction manual.
2. The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
3. The appliance has not been opened or tampered with, by any unauthorized person.

**This warranty does not apply for:**

1. Damages due to chipping, peeling,

plating and denting.

2. Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
3. Normal wear and tear of parts.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

---

**Liability for consequential loss or damage is neither accepted nor implied.**

S.NO: \_\_\_\_\_

DATE: \_\_\_\_\_

CASH MEMO: \_\_\_\_\_

DEALER'S NAME AND ADDRESS: \_\_\_\_\_

OWNER'S NAME & ADDRESS: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_



**OVEN TOASTER GRILLER**

OTGW 3760 RCSS

To explore our range of  
product and recipe log  
on to [www.usha.com](http://www.usha.com)



COOK