



# INSTRUCTION MANUAL

**Hand Held Garment Steamer**

Techne Direct 1000





Dear Customer,

Congratulations on the purchase of your new USHA Handheld Garment Steamer !

Designed with the most pertinent consumer needs in mind, the handheld steamer with its powerful steam output conditions your clothes and gives them a wrinkle free finish ensuring you get compliments the moment you step out of your home.

Keeping consumer hygiene as the top priority, the garment steamer with the help of the high temperature of steam provides you with germ free clothes, ensuring your fabrics stay healthy and feel fresh. The conditioning effect of the steam nourishes your clothes so that they can retain their lustre & colour for a long time.

With its compact size and easy to carry & use one button operation design, the garment steamer provides users with the convenience of operating the product anywhere without the need of external apparatus like an ironing board, or flat surface of any kind.

The garment steamer provides the perfect finish of crisp, wrinkle free clothes with the help of high steam output, thereby eliminating the need for a physical soleplate. This alternative solution to ironing alleviates the fear of spoiling your treasured delicate clothes like business suits, wedding wear, designer wear, expensive sarees etc; ensuring their longevity. Manufactured, using only the highest quality material and components, your USHA Handheld Garment Steamer is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes

# IMPORTANT PRECAUTIONS

For safety purpose you should read the instructions carefully before using the appliance for the first time and follow them. Save the instructions for future reference.

***The appliance is designed for domestic use and may only be operated in accordance with these instructions for use.***

Close supervision is necessary for any appliance being used near children.

The appliance generates high temperature steam, when using the appliance, hold steamer head facing away from you, in vertical position.

## DO's


1. Connect the appliance to a suitable mains supply outlet.
2. Unwind and straighten the power cord before use.
3. Place the appliance on a firm and steady surface.
4. Keep the appliance away from children.
5. Unplug the appliance during filling and cleaning.
6. Care should be taken when using this appliance due to emission of steam.
7. Disconnect the appliance from the mains supply and allow it to cool down before remove the brush accessory from the appliance or refit it.
8. Empty the water tank after each use.
9. When placing the appliance on its flat base, ensure that the surface on which the stand is placed is stable.
10. If the power cord and/or any part of the iron have been damaged, it must be replaced by manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.

## DONOT's

1. Do not connect the appliance to a wall socket intended for electronic shavers.
2. Do not allow children to touch the appliance or the power cord when steaming.
3. Do not use an extension power cord set unless competent authority has approved it.
4. Do not immerse the appliance in water or any other liquid.
5. Do not add perfume, vinegar or other chemical liquids into the water tank; they can damage the appliance seriously.
6. Do not use this appliance when it is damaged or it does not work properly.
7. Do not place the appliance on its head, when the appliance is used or connected to the mains. Lay it down on its solid flat base.
8. Do not apply steam on any clothes or fabrics that are being worn by human or pets, because steam temperature is high and may cause burns!.
9. Do not leave appliance unattended while plugged in or while it is still hot.
10. Do not roll the power cord around the appliance for storage until it has cooled down completely.
11. Do not attempt to open the cabinets or dismantle any part from the appliance; there are no serviceable parts inside.

## GET TO KNOW YOUR STEAMER

1. Steam Head
2. Steam Button
3. Water Inlet Cover
4. Water Tank
5. Fabric Brush
6. Pilot Light

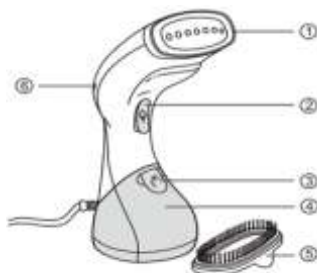

## TECHNICAL SPECIFICATIONS

Power Supply	220-240V, 50 Hz, AC, Single Phase
Wattage	920 Watts
Water Tank Capacity	200 ml

**Due to Continuous efforts for product up gradation, specifications are subject to change without prior notice.**

## FEATURES

### Performance



**Powerful Steam Output** - The continuous steam output of 20gm/min kills germs on clothes and makes it easier to remove tough wrinkles by moistening up the strands of fabric



**Vertical Steam Facility** - The vertical steam facility allows you to remove wrinkles from your delicate garments such as suits and sarees without removing them from the hangar, ensuring you get the perfect dry clean like finish at home

### Convenience



**Lint removal brush** - The garment steamer is provided with a detachable lint removal brush for removing annoying lints and thread strands from your delicate fabrics at a single stroke. Giving you clothes the perfect look



**Easy fill water inlet** - Equipped with an easy to open lid, the large water tank capacity allows you to steam your garments effectively



**Swivel cord** - The swivel cord allows you to manoeuvre the steamer easily, allowing you to reach every corner of the garment

### Safety



**Overheat shut off protection** - The steamer comes with an inbuilt thermal fuse which turns the steamer off before it reaches dangerously high temperatures

## SPECIAL INSTRUCTIONS

- To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary a 6 ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

## HOW TO ATTACH AND DETACH THE FABRIC BRUSH

1. Disconnect the appliance from the mains supply.
2. Allow the appliance to cool down completely, if it has been heated.
3. Hold the appliance safely on hand and attach the fabric brush onto its steam head, it locks into position with an audible click (See Fig.1).
4. After using this appliance, allow it cools down completely and simply pull on the top of the fabric brush to remove it. (See Fig.2).



Fig.1



Fig.2

**Note:** The fabric brush can be used in upside or downside of the grip.

## HOW TO FILL WATER

1. Disconnect the appliance from the mains supply before filling with water.
2. Allow the appliance to cool down completely, if it has been heated.
3. Hold the appliance safely while filling.
4. Release the water inlet cover, and then fill-in water through the water inlet hole (See Fig.3).
5. Fill up to the 'Max' level marked on the side of the water tank.
6. Replace the water inlet cover.
7. Clean the split water by a dry cloth.



Fig.3

**Note:** Fill the water tank with tap water. Do not put perfume, vinegar, chemically de-scaled water or any other liquids.

## FIRST TIME USE

1. Remove any protective films or stickers from the steamer and the cabinet if any.
2. Unwind and straighten the power cord.
3. Fill the water tank with water as described in "HOW TO FILL WATER".
4. Attach the fabric brush as described in "HOW TO ATTACH AND DETACH THE FABRIC BRUSH".
5. Connect the appliance to a suitable main supply outlet.
6. Once the appliance is plugged in, the pilot light will turn ON. keep pressing the steam button while the Steamer is heating up to ensure power supply to the steamer.
7. To begin steaming, press the steam button facing away from you, in vertical position.
8. For the first time steaming with an old garments or towel.

**Important:** When using this appliance or while it is heating up, do not put it down on its steam head. Lay it down on its appliance flat base.

## STEAMING THE CLOTHES

1. Disconnect the appliance from the mains supply.
2. Fill the water tank with water as described in "HOW TO FILL WATER".
3. Check the appliance is heated, and allow it cool down completely before attaching the fabric brush as described in "HOW TO ATTACH AND DETACH THE FABRIC BRUSH".
4. Connect the appliance to a suitable main supply outlet.
5. Once the appliance is plugged in, the pilot light will turn ON. keep pressing the steam button while the Steamer is heating up to ensure power supply to the steamer.
6. Hang the wrinkled article of clothing on a clothes hanger.
7. Pull the clothing tight with one hand.



Fig.4

8. Gently press the fabric brush against the clothing and move the fabric brush down the fabric. Keep pressing the steam button.
9. The combination of steam and fabric brush will gently remove the wrinkles on clothes.
10. Do not press the steam button more than three times successively when pilot light will turn off.
11. After steaming the clothes, let the garment cool down before wearing.
12. Disconnect the appliance from mains supply outlet.
13. When the steamer get cool down completely, then empty the water remaining in the tank and store it in safe place.

**Warning:** Do not touch the steam head while or after using, until it cools completely.

**Important:** Do not apply steam on any clothes or fabrics that are being worn human or pets. Temperature of steam is high.

#### EMPTYING AND STORING

1. Disconnect the appliance from mains supply.
2. Allow the steamer get cools completely, if it has been heated.
3. Release the water tank inlet cover.
4. Hold the appliance upside down and gently shake it to remove the remaining water (See Fig.5).
5. Replace the water tank inlet cover.
6. When the steamer gets cool down completely, then store it in a safe place.



Fig.5

#### CLEANING THE APPLIANCE

1. Disconnect the appliance from mains supply.
2. Allow the steamer get cools completely, if it has been heated.
3. Remove the fabric brush from its steam head.
4. Use a damp cloth or non-scratching cleaner to remove any dusts on a steam head and cabinets.
5. After cleaning, store it in safe place.

#### TROUBLESHOOTING:

Problem	Possible Cause	Solution
There is no steam.	The steamer is not plugged in.	Check that your appliance is connected correctly.
There is no steam.	The water level is too low.	Unplug your appliance and refill it.
	The steam button has not been primed.	Press the steam button, to begin steaming.
	The appliance is being used for the first time.	When the appliance is new, priming of the steam feature is necessary. Once heated press the steam button to start the steaming process.
The appliance does not heat.	It is not plugged in.	Plug in your appliance.
Water leaks or spits.	Your appliance is not hot enough.	Allow your fabric brush to heat for approximately 30 seconds before using.

## WARRANTY CARD

This appliance is warranted for 2 years against all manufacturing defects from the date of sale. In the event of any complaint, please contact USHA Care at Toll Free No. 1800-1033-111.

### THE WARRANTY IS VALID ONLY WHEN:

- 1) The appliance has been used and maintained in accordance with the instruction manual.
- 2) The warranty card and cash memo duly signed by the authorized dealer are presented with the complaint.
- 3) The appliance has not been opened or tampered with, by any unauthorized person.

### THIS WARRANTY DOES NOT APPLY FOR:

- 1) Damages due to chipping, peeling, plating and denting.
- 2) Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
- 3) Normal wear and tear of parts.
- 4) Damage resulting from accidents, mishandling or negligence on part of the customer.

**Liability for consequential loss or damage is neither accepted nor implied.**

S.NO: \_\_\_\_\_

CASH MEMO: \_\_\_\_\_ DATE: \_\_\_\_\_

DEALER'S NAME AND ADDRESS: \_\_\_\_\_

OWNER'S NAME & ADDRESS: \_\_\_\_\_

**USHA care™**

Toll free  
1800-1033-111

Email: [usha\\_care@ushainternational.com](mailto:usha_care@ushainternational.com)  
 <http://www.facebook.com/ushainternational>

## USHA INTERNATIONAL LTD.

Plot No. 15, Institutional Area, Sector 32, Gurgaon - 122 001, Haryana (India) Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail : [usha\\_care@ushainternational.com](mailto:usha_care@ushainternational.com) Website : [www.ushainternational.com](http://www.ushainternational.com)

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi (India) Tel : +91 11 23318114 Fax : +91 11 23318118



**SHRIRAM**

Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers  
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

**USHA**

® Registered Trademark and Copyright of USHA INTERNATIONAL LTD.



® Registered Trademark of USHA INTERNATIONAL LTD.

ISO 9001:2008  
Certified Company