

SPECIFICATION

- Drivers:- 10MM
- BT Version:- V 4.1, CSR#8635
- BT Profile:- HSP, HFP, A2DP and AVRCP
- Bluetooth Range:- < 10m
- Power Source: 3.7 V, 110mAh
- Frequency Response:- 20Hz-20KHz
- Playback Time: 6 hours
- Charging Time: 1.5 hours
- Standby Time: 150 hours
- Impedance:- Speaker 16Ω
- Sensitivity (dB):- 107±3Db
- Water proof profile:- IPX5



PAIRING

- 1. Make sure your phone, computer or music device is turned on and within 1 meter of each other.
- 2. Hold down the centre multifunction button for about 3 seconds until Blue LED light starts flashing quickly.
- 3. Activate the Bluetooth feature on your phone or device and set it to search for Bluetooth device (discoverable).
- 4. Select "boAt Rockerz 255 R" from the list of found devices.
- 5. If necessary, enter passcode "0000" to pair and connect the headphones to your device.
- 6. Once successfully paired, the LED light will flash Blue once every few seconds.

PLAYBACK/CONTROLS

- 1. Press multifunction button Play/Pause to start and pause audio.
- 2. Long Press (Volume +) button to skip forward to next track. Short Press the (+) button to increase volume.
- 3. Long Press (Volume -) button to go back to previous track. Short Press the (-) button to decrease volume.

NOTE: The controls will not function when charging.

CHARGING THE HEADPHONES

Use the Micro USB cable and connect headphones to your computer or adaptor device made for USB charging. A red LED indicator will turn on when the headphones are charging. The red LED light will turn off when headphones are fully charged.

CALLS

- 1. To answer an incoming call, short press the centre multifunction button.
- 2. To end call, press the centre multifunction button for about 1 second.

IMPORTANT SAFETY INFORMATION

Listen Responsibly

To avoid hearing damage, make sure that the volume on your music player is turned down before connecting your in-ear headphones.

After placing in-ear headphones in/on your ears, gradually turn up the volume until you reach a comfortable listening level. Noise levels are measured in decibels (dB), exposure to any noise at or above 85 dB can cause gradual hearing loss. Monitor your use; hearing loss is a function of loudness versus time. The louder it is, the less time you can be exposed to it. The softer it is, the more time you can listen to it.

Use Responsibly

Do not use Rockerz 255 R when it's unsafe to do so- while operating a vehicle, crossing streets, or during any activity or in an environment where your full attention to your surroundings is required.

It's dangerous to drive while wearing in-ear headphones, and in many places, illegal because it decreases your chance of hearing life-saving sounds outside of your vehicle, such as another car's horn and emergency vehicle sirens. Please avoid wearing your in-ear headphones while driving.



SAFETY INFORMATION

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.



FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Rockerz 255 R to extremely high or low temperatures.
- Do not leave your Rockerz 255 R in direct sunlight for extended periods of time.
- \bullet Do not leave your Rockerz 255 R near open flames such as cooking burners, candles, or fireplaces.
- Do not use your Rockerz 255 R in open while it is raining, as it is water resistant, not water proof.
- Do not put water or any other liquid on Rockerz 255 R.
- Do not block any ventilation openings.

BATTERY/CHARGER HAZARD

- Do not dispose of your Rockerz 255 R in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the Rockerz 255 R.
- Do not attempt to disassemble the Rockerz 255 R charger or force open the built-in battery because this may result in electric shock.
- Do not clean the Rockerz 255 R when it is being charged. Always unplug the charger first before cleaning the Rockerz 255 R.

CAUTION

- Do not use abrasive cleaners to clean your Rockerz 255 R because this could cause scratches and damage.
- Do not bring your Rockerz 255 R in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Rockerz 255 R unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Rockerz 255 R yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Rockerz 255 R battery, it is built-in and is not changeable.
- Observe all signs and displays that require an electrical device or RF radio product to be switched in designated area.
- Dispose of the Rockerz 255 R and the Rockerz 255 R's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.



