

# KENT HAND BLENDER-300W

POWERFUL BLENDER WITH STAND

**KENT**  
*Smart Chef*  
Appliances

HOUSE of PURITY

5 Speed  
Control



Multiple  
Beaters



Overheating  
Protection



Turbo  
Function



100%  
Copper  
Motor



300W



# Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to KENT!

At the outset, allow us to thank you for your trust in KENT Smart Chef Appliances. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with KENT HAND BLENDER's performance and that it will serve your and your family's needs without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with its operation and maintenance.

With the robust build and high quality, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest KENT dealer or branch.

Bon Appétit!

KENT RO Systems Ltd.



# TABLE OF CONTENTS

1. Introduction .....	1
2. Features of KENT Hand Blender .....	2
3. Know Your Product .....	2
4. Items in the Box .....	3
5. Using KENT Hand Blender .....	3
6. How to Operate .....	3
7. Cleaning and Maintenance .....	5
8. Precautions .....	5
9. Important Safety Instructions .....	6
10. Troubleshooting .....	7
11. Technical Specifications .....	8

## INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes we live in and the air that we breathe.

Use of innovative technology and support from a competent service network have enabled us to create a brand, which has become synonymous to well-being and health. Continuing with the tradition, we now present the KENT HAND BLENDER - 300W, a cutting-edge, high-speed hand blender that works wonders.

Unlike your other cooking appliances, KENT HAND BLENDER - 300W is designed keeping your specific needs in mind. We know how you struggle to cook faster, and this device allows you to save as much time as possible, by taking care of your kitchen chores in a matter of minutes. Unlike cumbersome food processors that most of us are reluctant about using, KENT HAND BLENDER - 300W is a versatile appliance that's easy to use and ergonomically designed. We are certain that you will love to put it to use every single day.

## FEATURES OF KENT HAND BLENDER-300W

1. Powerful blender comes with power of 300Watts.
2. It comes with 5 variable speed controls that helps in mixing ingredients.
3. Turbo function feature
4. In-built overheating protection.
5. It comes with powerful copper motor to ensure longevity.
6. Food grade plastic to maintain hygiene.
7. Equipped with multiple beaters & dough hooks.

## KNOW YOUR PRODUCT





## ITEMS IN THE BOX

1. KENT HAND BLENDER- 300 W	:	01 No.
2. Beaters	:	02 Nos.
3. Dough Hooks	:	02 Nos.
4. Stand	:	01 No.
5. User Manual	:	01 No.

## USING KENT HAND BLENDER - 300W

1. Remove any sticker that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damage.
3. Before switching on the appliance, make sure that your home's mains voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT Hand Blender – 300 W before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

## HOW TO OPERATE

1. Fit the Beaters or Dough Hooks into the sockets.
2. Plug in the appliance.
3. Hold the KENT Hand Blender handle. Lower the beaters or hooks into ingredients.
4. Switch on and select the desired speed. It begins to mix the ingredients in the bowl.

5. You can press "Turbo" button to accelerate the speed during mixing.
6. When you have finished mixing, stop the blender by pushing the Speed button to "0" at once.
7. Wait until the beaters or hooks attached, have stopped rotating then pull out the hand-blender from the food item.
8. Switch off the mains before you eject the beaters or hooks, or if changing them. Once ejected you can clean the beaters/hooks with water, dry them with soft cloth and store together with main body.

## MIXING GUIDE

SPEED	APPLICATION	DESCRIPTION
1.	FOLD	This is a good starting speed for bulk and dry ingredients such as flour, butter and potatoes.
2.	BLEND	Best speed to blend liquid ingredients for mixing salad dressings.
3.	MIX	For mixing cakes, cookies and quick breads.
4.	CREAM	For creaming butter and sugar, beating uncooked candy, desserts. etc.
5.	WHIP	For beating eggs, making icings, whipping potatoes and cream. etc.

**Note:** Use hooks if you are mixing thick sticky flour. Use beaters if you are beating eggs.



## CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it
- Eject the Beaters or Dough Hooks and clean them with a solution of lukewarm water & soap
- Wipe the main unit with a moist cloth and non-abrasive liquid cleaner
- Do not immerse the appliance in water or any other liquid
- Never put any part of the appliance in the dishwasher
- After cleaning it thoroughly, dry it using a soft cloth
- Ensure that the appliance is completely dry before storing it

**Note:** Never immerse the motor unit of the blender in water, or rinse it under the tap. Wipe it with a dry cloth.

## PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown
- The input voltage must not exceed the rating; it might damage the appliance
- Unplug before cleaning/moving the appliance
- Do not use the appliance with damaged power cord or plug
- If power cord is damaged, replace it with a genuine KENT spare
- Do not install or operate the appliance near any heat source, e.g., heater
- If the appliance is not in use for a longer time, unplug it
- Do not sit on, stand on or shake the appliance



## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be taken, including the following:


1. Unplug, when not in use and before servicing.
2. To reduce the risk of electric shock, do not use near or on wet surfaces.
3. Use the appliance only as described in the manual.
4. Do not use the appliance if cord or plug is damaged or worn out.  
Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center only.
6. Keep the cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
10. Turn all controls off before unplugging.
11. This appliance is suitable for indoor use only.
12. Keep away from children.
13. The appliance is not designed to be used by people who, are physically or mentally disabled or lack relevant experience and knowledge, unless a person responsible for their safety uses the product for supervision or guidance.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start	There is a connection problem	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket
	The appliance is defective	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance
The appliance suddenly stops working while running	The appliance has overheated	Let the appliance cool for 20 minutes before attempting to restart it
	The appliance is over loaded	Remove some ingredients, add some water and try again
	The appliance is defective	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance
The appliance makes lots of noise	Beaters/hooks are not working properly	Reinstall the beaters/hooks correctly
	Problem with blender's inner drive broken	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance
Motor does not work properly	Appliance washer defective	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance
	Beaters/hooks not installed properly	Reinstall the beaters/hooks correctly



## TECHNICAL SPECIFICATIONS

<b>Product</b>	<b>KENT Hand Blender – 300 W</b>
<b>Product Code</b>	16051
<b>Net Weight</b>	1.05 kg
<b>Dimension (mm)</b>	153 (L) X 145 (W) X 215 (H)
<b>Input Power Supply</b>	220-240 V, AC 50 Hz. 
<b>Power Consumption</b>	300 W



HOUSE of PURITY



Innovations for  
Better Living

Marketed by:

**KENT RO SYSTEMS LTD.**

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.

E-mail: [sales@kent.co.in](mailto:sales@kent.co.in) | Website: [www.kent.co.in](http://www.kent.co.in)

Manufactured by:

**KENT RO SYSTEMS LTD.**

1) Khasra No. 93, Village-Bantakhedi, Tehsil-Roorkee,  
District-Haridwar, Uttarakhand-247 668, India.

2) A-6, Sector-87, Noida-201 305, U.P., India.

**For customer complaints, contact our Customer Care Officer at:**

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. Call: 92-789-12345

E-mail: [service@kent.co.in](mailto:service@kent.co.in) or visit us at [www.kent.co.in](http://www.kent.co.in)