

3. Heat – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

4. Power Sources – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

5. Power-Cable Protection – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.

6. Cleaning – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

7. Objects and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

8. Attachments – Do not use attachments not recommended by the product manufacturer.

9. Overloading – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

10. Damage Requiring Service – The unit should be serviced by qualified service personnel when:

A. the power supply cable or plug has been damaged.

B. objects have fallen into or liquid has been spilled into the enclosure. C. the unit has been exposed to rain.

D. the unit has been dropped or the enclosure damaged.

E. the unit exhibits a marked change in performance or does not operate normally.

12. Periods of Nonuse – If the unit is to be left unused for an extended period of time, such as a month

or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.

13. Servicing – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

www.portronics.com

Support No: 18001034241, 011-42413131(Business Hrs)

Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal,

please dispose of the device in a waste bin for electronic devices.

Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated

Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.

Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substance.

Always confirm that the temperature is 5°C – 40° C before you charge the battery.

Leakage or deterioration of the battery may occur if this warning is not heeded.

Never expose the battery to any liquid.

Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.

Always keep the battery out of the reach of infants and small children.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.

2. Ventilation – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

Using Bluetooth: Pairing Your Device

1. Turn on your Bluetooth-enabled device and turn on Bluetooth capability as described in the device's user manual.

2. Move the Power OFF button to ON button. The unit will turn on and attempt to auto link to a previously paired device for 10 seconds, indicated by a 3 note tone and the Power/Charging/Pairing Indicator Light on the back of the unit flashing blue. If a linked device is found, the indicator will glow solid blue.

3. If no linked device is found, the unit will enter pairing mode, indicated by a 2 note tone and the Power/Charging/Pairing Indicator Light on the back of the unit will flash while the unit attempts to pair.

NOTE: If the unit is charging while pairing is attempted, the light will continue to blink red. "Soundpot" should appear on your device's menu. If "Not Connected" or similar appears on your display, tap on the "Soundpot" to begin pairing. If your device asks for a password, enter "0000" on the keyboard of your device.

4. Once paired with a device, the Power/Charging/Pairing Indicator Light on the back of the unit will glow blue steadily. There should be an indication on your device that pairing is complete. On some devices, you must then select "Use as Audio Device" or similar on the device's Bluetooth menu. Once paired, your device should link to the Soundpot whenever within range.

Playing Audio via Aux Cable

1. Connect the AUX Cable in 3.5 mm audio plug and the other end to your mobile/tablet/computer.

2. Make sure that Soundpot is not paired already with any other device.

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact us for repair information.


WARNING/DISPOSAL OF UNIT

Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below:

Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.

Included

Soundpot system, Micro USB to USB/3.5 mm audio cable

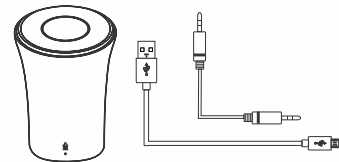


Charging the Unit

1. Connect the micro USB plug to the micro USB charging port on the back of the unit.

2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. For first time use, charge unit for about 8 hours.

3. The Power/Charging/Pairing Indicator Light on the back of the unit glows red steadily while the unit is charging and turns OFF. Once the unit is fully charged. If unit is not powered on when micro USB plug is connected, the red light glows steadily to indicate unit is charging.

NOTE: When the unit is on and not connected to a power source, the Power/Charging/Pairing Indicator Light flashing red means the battery needs charging.

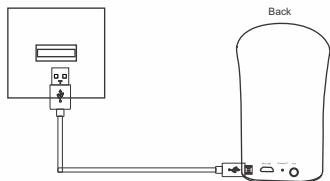

Specifications

Impedance	: 4Ω
Output	: 3W
Voltage	: DC 5V
Aux in	: 3.5mm
Bluetooth version	: 4.1
Wight	: 179.5g
Size	: 95.5(H) X 55.5(w) X 54.5(D) mm

Introduction


Thank you for purchasing the Portronics Soundpot. This product is designed to provide high quality wireless sound for your iPad, iPhone, iPod, computer, PDA or other Bluetooth audio device. Along with the included Quick Bluetooth Connection Guide this instruction booklet explains the basic operation and care of the unit. Please read them carefully and keep for future reference.

Maintenance

Place the unit on a level surface away from sources of direct sunlight or excessive heat.

Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.

Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzene, thinner or similar materials can damage the surface of the unit.

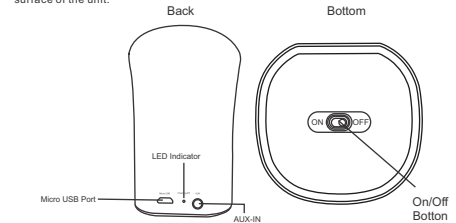

SOUND POT

Portable Bluetooth Speaker

User Manual



Portronics

www.portronics.com